



CAFFEO®  
*LatteA*

型号：E 955  
-101 / -102 / -103 / -104

简化字

한국어

ENGLISH




Version 2.3  
05/2014


Melitta Europa  
GmbH & Co. KG  
D-32372 Minden

操作说明书  
사용 설명서  
Operating Instructions



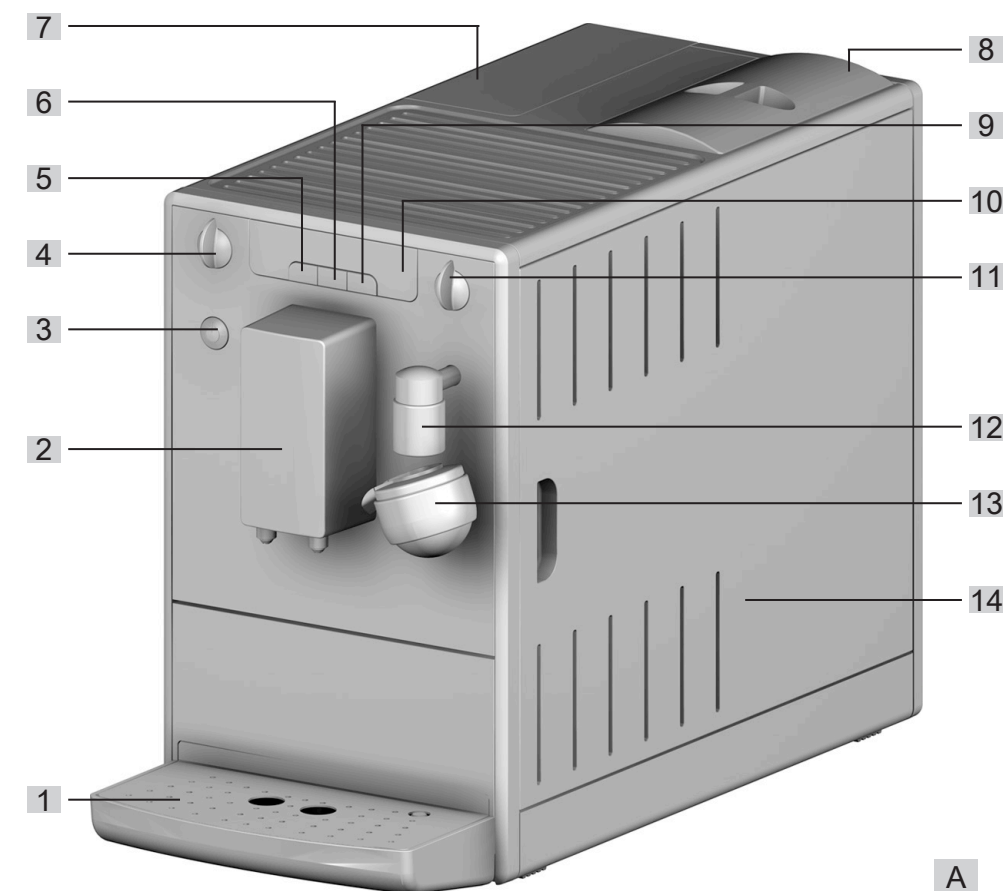


A

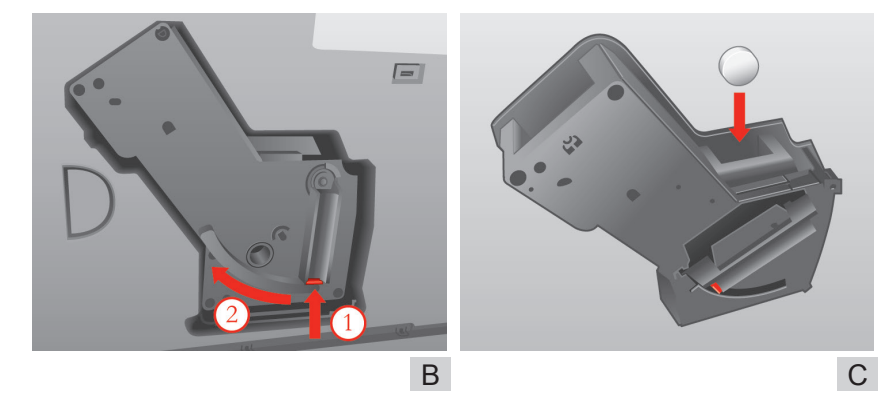


B

C

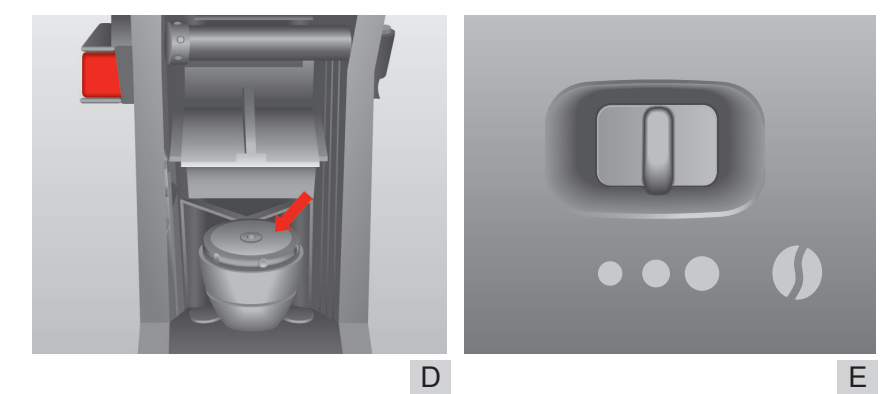

D

E

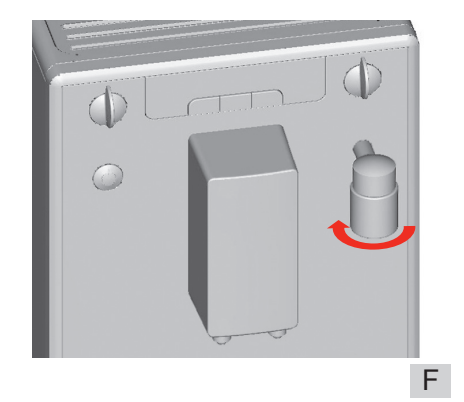

F





## 尊敬的顾客：

感谢您购买Melitta®CAFFEO®LATTEA® (美乐家拿铁全自动咖啡机)。

欢迎加入成为享受拿铁-玛琪朵咖啡的品尚人士。

拥有全新美乐家拿铁高品质全自动咖啡机，您将体验到非比寻常的咖啡时光。品味个人喜爱的口味，尽享带给每个感官的刺激！

为确保您和您的尊客长时间享用美乐家拿铁全自动咖啡机所带来的欢乐时光，请仔细阅读完本操作手册并安全保存。

如需了解咖啡机的更多信息或有任何疑问，敬请直接联系我们\*，或登陆我们的网站：[www.melitta.cn](http://www.melitta.cn)。

我们竭诚希望全新美乐家拿铁全自动咖啡机带给您非凡的咖啡体验。

美乐家拿铁全自动咖啡机团队

简化字

\*服务热线：800-999-5859，服务时间：  
上午9时至下午6时（周一至周五，节假日除外）

® 美乐家集团旗下公司注册商标





## 目录

1	本操作手册相关信息.....	4
1.1	操作手册中的符号.....	4
1.2	指定用途.....	5
1.3	非指定用途.....	5
2	一般安全说明.....	6
3	机器说明.....	8
3.1	图A说明.....	8
3.2	显示面板.....	9
4	启动.....	10
4.1	设置.....	10
4.2	连接.....	11
4.3	装满咖啡豆容器.....	11
4.4	冲洗牛奶粉末罐.....	11
4.5	给水箱注满水.....	12
4.6	首次启用机器.....	12
4.7	调整咖啡杯量.....	13
4.8	调整咖啡浓度.....	13
5	机器开启与关闭.....	14
5.1	开机.....	14
5.2	关机.....	14
6	插装美乐家Claris®滤水器.....	15
7	制作意式特浓咖啡或意式咖啡.....	16
7.1	制作单杯意式特浓咖啡或意式咖啡.....	16
7.2	制作双杯意式特浓咖啡或意式咖啡.....	17
8	制作牛奶泡沫.....	18
9	制备热水.....	18





10 功能设置.....	19
10.1 调节水硬度.....	19
10.2 设定节能模式.....	20
10.3 设定自动关机功能.....	21
10.4 调整烹煮温度.....	22
10.5 出厂设置复位.....	23
10.6 调整研磨精细度.....	24
11 维护与保养.....	25
11.1 一般性清洁.....	25
11.2 清洗烹煮器.....	26
11.3 综合清洁程序.....	27
11.4 综合除垢程序.....	30
12 运输和处置.....	33
12.1 运输准备、防冻保护以及长期不用的保护措施.....	33
13 故障排除.....	35



## 1 本操作手册相关信息

为便于使用，请将本操作手册沿折叠页前后展开折叠。

### 1.1 操作手册中的符号

本操作手册中的符号表示美乐家拿铁全自动咖啡机操作时可能出现的特定危险，或是提供一些有益建议。

#### 警告!

带有此符号的文字包含了人身安全相关的信息，并指出可能发生的事故和伤害危险。

#### 小心!

带有此符号的文字包含了应避免的不当操作，并指出了可能发生的材料损坏危险。

#### 注意!

带有此符号的文字包含了美乐家拿铁全自动咖啡机使用过程中的其它重要信息。





## 1.2 指定用途

美乐家拿铁全自动咖啡机专为烹煮咖啡和特色咖啡、煮沸水及制作牛奶泡沫而设计-美乐家独特的milk2shower奶粉发泡技术。

指定用途包括：

- 仔细阅读、理解并遵守操作说明书。
- 特别注意遵守安全操作指南。
- 必须在说明书规定的操作条件下使用美乐家拿铁全自动咖啡机。

## 1.3 非指定用途

所谓非指定用途，指的是用户以区别于操作说明书描述的方式使用美乐家拿铁全自动咖啡机。

### 警告!

非指定用途使用可能导致受伤或被热水或蒸汽烫伤。

### 注意!

生产商对非指定用途使用过程中造成的损害不承担任何责任。



## 2 一般安全说明

请务必仔细阅读本操作手册全文。未遵照操作手册使用，会对您自身的安全及机器的安全使用产生影响。

### 警告!

- 请将以下物品置于远离儿童可及之处：包装材料、小零件。
- 所有使用本机器的人员必须事先熟悉其操作流程，掌握机器可能存在的危害。
- 禁止让儿童使用此机器或独自在此机器周围玩耍。
- 8岁以上小孩，身体或精神有缺陷的人员以及从未使用过该产品或对该产品不了解的人员只有在旁人的监护下或者在接受过相关安全操作和危险隐患的指导后方能使用该产品；禁止小孩把产品当玩具玩耍；在无人监护的情况下，小孩，身体或精神有缺陷的人员以及从未使用过该产品或对该产品不了解的人员不能对产品进行清洁或维修。
- 仅可在机器完好无损的情况下使用。
- 请勿尝试自行修理机器。如需维修，请拨打美乐家®服务热线。
- 不要对本机、部件或随机附件进行任何改装。
- 请勿将咖啡机浸入水中。
- 请勿用未擦干的手或脚接触咖啡机。
- 请勿接触机器发热的表面。
- 当机器正在运作时，请勿将手伸进机器内部。
- 当机器正在运作时，请勿打开右盖，除非本操作说明书中明文允许打开。







 **警告!**

- 本机器供家庭使用及类似环境使用，例如：用于门店、办公室和其它类似工作环境内的员工厨房；用于农业设施；供酒店、汽车旅馆和其它居住设施客户使用；供卧床休息和早餐时使用。
- 保修期内，只能由制造商负责更换损坏的电源线；在保修期结束后，损坏的电源线必须由合格的专业人员来更换。
- 保修期内，只能由制造商负责更换损坏的电源线；在保修期结束后，损坏的电源线必须由合格的专业人员来更换。
- 遵守操作说明书中其它章节的安全说明。



## 3 机器说明

### 3.1 图A说明

图例序号	说明
1	带有承托盘的接水盘和咖啡渣收集器 ( 内置 ) 以及浮标 ( 显示接水盘已满 )
2	可调高度的咖啡出口
3	开/关机按钮 
4	咖啡杯量调节器
5	单杯咖啡按钮 
6	双杯咖啡按钮 
7	水箱
8	咖啡豆容器
9	咖啡浓度按钮 
10	显示面板
11	牛奶发泡器旋转开关
12	牛奶发泡器
13	牛奶粉末罐
14	右盖 ( 可拆卸 , 内装研磨精细度调节元件、烹煮器和铭牌 )





### 3.2 显示面板

图标	含义	显示	说明/提示
	待机	闪烁	机器预热或咖啡释放流程正在运行
		亮起	机器准备运行
	美乐家Claris®滤水器	亮起	请更换美乐家Claris®滤水器
		闪烁	滤水器更换正在进行
	水箱	亮起	给水箱注满水
		闪烁	插入水箱
	接水盘和咖啡渣容器	亮起	请清空接水盘和咖啡渣容器
		闪烁	请插入接水盘和咖啡渣容器
	咖啡浓度	亮起	1. 咖啡豆：淡味 2. 咖啡豆：正常 3. 咖啡豆：较浓
		闪烁	装满咖啡豆容器；在下一个咖啡释放流程后停止闪烁
	清洁	亮起	需运行综合清洁程序
		闪烁	综合清洁程序正在运行
	除垢	亮起	需运行综合除垢程序
		闪烁	综合除垢程序正在运行
	牛奶发泡器和热水释放	亮起	请打开牛奶发泡器
		闪烁	请关闭牛奶发泡器

**注意!**

如果显示面板上的所有图标均处于微亮状态，表示设备正处在节能待机模式下。



## 4 启动

首次启动机器时，请完成以下任务。

当您完成下述步骤之后，机器即可准备投入运行。随后您就可以开始制作咖啡了。我们建议您在第一次使用时倒掉前双杯咖啡。

### 4.1 设置

- 将咖啡机置于稳固、水平且干燥的表面，确保机器与墙和其它物品至少保持10厘米的距离。
- 美乐家拿铁全自动咖啡机的后侧装有两个滚轮。从前端轻轻抬起机器，滚轮可轻松移动。

#### ! 小心!

- 不要把机器置于发热表面或潮湿区域。
  - 不要使用低温冷藏车来运输此机器或储藏在低温房间内，因为残留的水分会冻结或凝结从而对机器造成损坏。请遵守第33页上的说明。
- 
- 咖啡渣容器位于接水盘上。请确保接水盘被推入机器中直至停止。

#### 📄 注意!

- 保留包装材料，包括硬泡沫材料等，以方便运输或者可能出现的退货返运，从而避免运输损坏。
- 在机器首次启动时，发现机器里有咖啡渣和水的痕迹是正常的，这是因为机器在出厂之前进行了无故障功能测试。





## 4.2 连接

- 将电源插头与适用的电源插座相连接。

### 警告!

电源电压不正确、连接不正确或电源线损坏，会引发火灾和触电危险！

- 确保电源电压与机器铭牌上规定的电源电压相符。铭牌位于盖板后面的机器右侧（图A，序号14）。
- 确保电源接口符合电气安全适用标准。如有疑问，请联系有资质的专业电工。
- 切勿使用损坏的电源线（绝缘皮损坏、裸线）。

## 4.3 装满咖啡豆容器

- 取下咖啡豆容器的盖子，把容器装满新鲜的咖啡豆。

### 小心!

- 咖啡豆容器只能装咖啡豆，并且保持咖啡豆的干燥，防止返潮。
- 禁止把经研磨过的、干冻的或加焦糖的咖啡豆，或速溶粉，糖等加入咖啡豆容器中。

- 将盖子重新盖到容器上。

## 4.4 冲洗牛奶粉末罐

- 首次启动机器之前，请使用清洁水冲洗牛奶粉末罐。




#### 4.5 给水箱注满水

- 打开水箱的盖子（图A, 序号7），并向上拉动水箱直至从机器中取出。
- 将水箱注满新鲜水，直至最大刻度，然后重新放入咖啡机中。

##### 注意!

在运行过程中（比如咖啡释放过程中），如果水箱中的水已用完，则水箱图标就会亮起。此时，当前的操作过程结束，在开始下一个操作之前，水箱必须重新加满水。






#### 4.6 首次启用机器

机器中的所有管线在出厂前已经排干并通风。因此，当第一次启用机器时，加热后，牛奶发泡器标识会亮起，此时机器必须通过牛奶发泡器排气。

##### 小心!

机器排气时，必须拆除Claris®滤水器，且水箱必须装满水。

- 排气过程结束后才能将Claris®滤水器插入水箱中。
- 排气之前，水箱须加满新鲜水，直到最大。

- 按下开/关机按钮，接通机器电源。  
→ 待机图标闪烁。机器预热。预热结束后，牛奶发泡器图标亮起。
- 取下牛奶粉末罐，在牛奶发泡器下面放置一个接水容器。
- 顺时针旋转牛奶发泡器的旋转开关（图A，序号11），将牛奶发泡器打开。  
→ 牛奶发泡器图标闪烁。热水流入接水容器中。
- 当不再有热水流出且牛奶发泡器图标亮起时，逆时针旋转牛奶发泡器的旋转开关，使牛奶发泡器关闭。  
→ 此时，机器准备运行。









#### 4.7 调整咖啡杯量

- 旋转咖啡杯量调节器 (图A, 序号4), 从而调整咖啡烹煮量 (向左旋转调节器: 减少咖啡杯量; 向右旋转调节器: 增加咖啡杯量)。

咖啡杯量	调节器在最左边	调节器在中间	调节器在最右边
单杯	30ml	125 ml	220ml
双杯	2x30ml	2x125 ml	2x220ml

#### 4.8 调整咖啡浓度

- 按下咖啡浓度调节按钮  数次, 从三种烹煮浓度中选择。  
→ 您选择的浓度在显示面板上由咖啡豆图标  来显示。

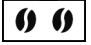显示	烹煮浓度
	清淡
	正常 (出厂设置)
	较浓

- 您也可以通过调节研磨精细度来改变咖啡的浓淡。有关详情, 请见第24页。






## 5 机器开启与关闭



### 5.1 开机

 **注意!**

每次连接电源时将自动进行冲洗。

- 在咖啡出口处放置一个接水容器。
- 按下开/关机按钮  连接电源。
  - 待机图标  闪烁。机器预热。  
机器进行自动冲洗，同时热水从出水口流出。然后待机图标  亮起。机器准备就绪可制作咖啡了。

### 5.2 关机


- 在咖啡出口处放置一个接水容器。
- 按下开/关机按钮  断开电源。
  - 一旦冲泡咖啡完成，机器将自动冲洗咖啡通道。烹煮器处于复位状态。待机图标  熄灭。

















## 6 插装美乐家Claris®滤水器

随机包含美乐家Claris®滤水器，用于过滤水垢和其它杂质。在首次启动机器之后，请将滤水器插装到机器中。如果使用了滤水器，用户无须频繁对机器除垢，同时水的硬度自动设置到1级硬度（见第19页）。由于可靠的防水垢保护功能，因此延长了机器的使用寿命。水过滤器应定期更换（每两个月），至少在显示面板上显示滤水器图标时，必须更换滤水器。

事前准备：关机（见第14页，开机和关机）。

- 同时按下咖啡浓度按钮和开/关机按钮两秒钟以上。  
→ 在整个更换过程中，水过滤器图标会持续闪烁。接水盘图标亮起。
- 清空接水盘，然后重新插入。  
→ 水箱图标亮起。
- 在将滤水器插入机器前，将滤水器放入盛有纯净水的玻璃杯中浸没数分钟。
- 打开水箱的盖子（图A，序号7），并向上拉动水箱直至从机器中取出。
- 清空水箱。
- 将美乐家Claris®滤水器旋入水箱底板的螺纹内。
- 将水箱注满纯净水，直至最大刻度，然后重新放入咖啡机中。  
→ 牛奶发泡器图标亮起。
- 取下牛奶粉末罐，在牛奶发泡器下面放置接水容器。
- 顺时针旋转牛奶发泡器的旋转开关（图A，序号11），牛奶发泡器启动。  
→ 牛奶发泡器图标闪烁。热水流入牛奶发泡器下方的接水容器中。
- 当不再有热水流出且牛奶发泡器图标亮起时，逆时针旋转牛奶发泡器的旋转开关，使牛奶发泡器关闭。  
→ 此时，待机图标和咖啡豆图标亮起。  
机器已准备运行，同时水的硬度自动设置到1级。









### 注意!

- 美乐家Claris®滤水器不能长时间处在干燥状态。因此，如果长时间不使用机器，我们建议将美乐家Claris®滤水器保存在水中，然后置于冰箱内。
- 插入美乐家Claris®滤水器后，在首次冲洗机器时，多余的活性炭就会从过滤器中冲洗出来。因此，这会造成冲洗水出现轻微的灰色，之后水会重新变得澄清。

## 7 制作意式特浓咖啡或意式咖啡

### 7.1 制作单杯意式特浓咖啡或意式咖啡

事前准备：机器运行准备完成。（见第14页，开机和关机）。

- 在咖啡出口处放置一个合用的杯子。
- 按下烹煮浓度按钮 ，调节咖啡浓度。
- 旋转咖啡杯量调节器（图A，序号4），调节杯量。
- 按下单杯按钮 。
  - 此时，研磨程序开始，同时开始出咖啡。待机图标  闪烁。当达到设定的咖啡杯量时，将自动停止出咖啡。
- 如果要提前中断出咖啡，按下单杯按钮  即可。

### 注意!

- 第一次启动机器时，研磨机的磨豆时间比通常时间更长。
- 您可以在出咖啡的过程中调节杯量。如果减少咖啡杯量，向左旋转咖啡杯量调节器至所需量或者旋转到机器停止出咖啡。如果增加咖啡杯量，向右旋转调节器即可。









## 7.2 制作双杯意式特浓咖啡或意式咖啡

事前准备：机器运行准备完成。（见第14页，开机和关机）。

在咖啡出口处按顺序放置两个合用的杯子。

- 按下咖啡浓度按钮 ，调节咖啡浓度。
- 旋转咖啡杯量调节器（图A，序号4），调节杯量。
- 按下双杯按钮 。
  - 此时，双杯研磨程序开始，同时开始出咖啡。待机图标  闪烁。当达到设定的咖啡杯量时，将自动停止出咖啡。
  - 如果要提前停止出咖啡，按下双杯按钮  即可。



### 注意!


- 第一次启动机器时，研磨机的磨豆时间比通常时间更长。
- 您可以在出咖啡的过程中调节杯量。如果减少咖啡杯量，向左旋转咖啡杯量调节器至所需量或者旋转到机器停止出咖啡。如果增加咖啡杯量，向右旋转调节器即可。



## 8 制作牛奶泡沫

事前准备：机器运行准备完成。（见第14页，开机和关机）


在牛奶粉末罐的下面放置一个咖啡杯（如拿铁玛奇朵杯）。

- 取出牛奶粉末罐，添加milk2shower牛奶粉。
- 将牛奶粉末罐放置在牛奶发泡器下面的磁力点（图A，序号13）。
- 顺时针旋转牛奶发泡器的旋转开关（图A，序号11），使牛奶发泡器启动。
  - 牛奶发泡器图标  闪烁。大约90ml热水流入牛奶罐中，并产生牛奶泡沫。牛奶泡沫从牛奶粉罐中流入牛奶罐下面的咖啡杯中。达到约90ml后自动停水。
- 逆时针旋转牛奶发泡器的旋转开关，使牛奶发泡器关闭。（如果需要少量牛奶泡沫，您也可以提前关闭牛奶发泡器）。
- 现在开始咖啡释放过程，也就是制作拿铁玛奇朵咖啡。

## 9 制备热水

事前准备：机器运行准备完成。（见第14页，开机和关机）

取下牛奶粉末罐，在牛奶发泡器下面放置一个高咖啡杯。

- 顺时针旋转牛奶发泡器的旋转开关（图A，序号11），使牛奶发泡器打开。
  - 牛奶发泡器图标  闪烁。大约90ml热水从牛奶罐流出到咖啡杯中。您可以通过关闭牛奶发泡器随时中断本过程。
- 逆时针旋转牛奶发泡器的旋转开关，使牛奶发泡器关闭。
- 如果未达到需要量的热水，可重复以上步骤。












## 10 功能设置

### 10.1 调节水硬度



使用产品随机内附的测试条测定您所在地区的水质硬度。请遵照测试条包装上的说明。机器在出厂已调节为水质硬度4。如果您插入美乐家Claris®滤水器，将自动设置为水质硬度1（见第15页）。

事前准备：机器运行准备完成。（见第14页，开机和关机）

为维护机器的质量，请按照以下要求调整水硬度

- 同时按下单杯按钮  和双杯按钮  两秒钟以上。  
→ 待机图标  快速闪烁。
- 按下单杯按钮  调出水质硬度调节菜单。  
→ 滤水器图标  亮起。
- 按下咖啡浓度按钮  数次，从四种水质硬度水平中选择。
- 下表中您可选择的水硬度范围会通过显示面板上的咖啡豆图标  表示出来。

水硬度范围	特性	°d	°e	°f
1 	软	0-10	0-13	0-18
2 	中等	10-15	13-19	18-27
3 	硬	15-20	19-25	27-36
4  闪烁	非常硬 (出厂设置)	>20	>25	>36

- 按下开/关机按钮 ，确认选择的水质硬度。  
→ 显示面板上的所有图标短暂闪烁，表示已确认。机器准备运行，待机图标  亮起。






### 注意!







在调节过程中，如果在60秒钟时间内没有按下按钮，机器将自动返回待机模式。

## 10.2 设定节能模式



上次操作结束之后（根据设置），机器可自动转换到节能待机模式（从而机器消耗的能源少于待机模式）。您可以按节能模式设置不同时间。机器的出厂设置为5分钟 。

事前准备：机器运行准备完成。（见第14页，开机和关机）

请按照以下要求调整计时器：

- 同时按下单杯按钮  和双杯按钮  两秒钟以上。  
→ 待机图标  快速闪烁。
- 按下单杯按钮  两次，调出节能待机模式菜单。  
→ 水箱图标  亮起。
- 按下咖啡浓度按钮  数次，从定时器的四个时间段中进行选择。

显示	时间
	5分钟 (出厂设置)
	15分钟
	30分钟
	关闭

- 按下开/关机按钮 ，确认选择的时间。  
→ 显示面板上的所有图标短暂闪烁，表示已确认。机器准备运行，待机图标  亮起。






 **注意!**







按下咖啡浓度按钮 ，将机器从节能待机模式下唤醒。然后，您可以直接制作咖啡。

### 10.3 设定自动关机功能



上次操作结束之后（根据设置），机器可自动关闭。因此，您可按自动关机功能设置不同时间。机器出厂设置为30分钟 。

事前准备：机器运行准备完成。（见第14页，开机和关机）

请按照以下要求调整计时器：

- 同时按下单杯按钮  和双杯按钮  两秒钟以上。  
→ 待机图标  闪烁。
- 按下单杯按钮  三次，调出自动关机功能菜单。  
→ 接水盘图标  亮起。
- 按下咖啡浓度按钮  数次，从定时器的四个时间段中进行选择。

显示	时间
	30分钟 ( 出厂设置 )
	2小时
	4小时
 闪烁	8小时

- 按下开/关机按钮 ，确认选择的时间。  
→ 显示面板上的所有图标短暂闪烁，表示已确认。机器准备运行，待机图标  亮起。














#### 10.4 调整烹煮温度



咖啡烹煮温度在出厂设置为2级（中等温度 ）。

事前准备：机器运行准备完成。（见第14页，开机和关机）

按下述方法调整咖啡温度，以满足您的要求：

- 同时按下单杯按钮  和双杯按钮  两秒钟以上。  
→ 待机图标  闪烁。
- 按下单杯按钮  四次，调出咖啡烹煮温度菜单。  
→ 清洁图标  闪烁。
- 按下咖啡浓度按钮 ，从三种咖啡烹煮温度中进行选择。

显示	咖啡烹煮温度
	低
	中温 ( 出厂设置 )
	高

- 按下开/关机按钮 ，确认选择的烹煮温度。  
→ 显示面板上的所有图标短暂闪烁，表示已确认。机器准备运行，待机图标  亮起。










## 10.5 出厂设置复位

事前准备：机器运行准备完成。（见第14页，开机和关机）

- 同时按下咖啡浓度按钮  和开/关机按钮  两秒钟以上。  
→ 此时，所有设置都恢复到出厂设置，待机图标  快速闪烁，表示确认。

出厂设置一览表

功能设置	出厂设置
水质硬度	水质硬度4
节能待机模式	5分钟 
自动关机功能	30分钟 
烹煮温度	中等温度 



## 10.6 调整研磨精细度

在出厂前，研磨精细度已调整到最佳状态。因此，我们建议您在烹煮1,000杯咖啡（大约1年）之后，重新调整研磨精细度。

您只能在研磨机运行时才能设置研磨精细度。因此，必须在开始排至咖啡后，立即调整研磨精细度。

如果咖啡口味不够浓，我们建议您设置到更精细的研磨级别。

- 把手伸进机器右侧的凹处（图A，序号14），然后向右拉出右盖板。
- 开始正常的咖啡制作过程。
- 在研磨机运行的状况下：把操作杆置于三个位置之一（图E）。
- 从机器右侧后面插入右盖板的四个挡片，然后向左摆动右盖板，直至右盖板锁紧。

操作杆位置	研磨精细度
左边	较细
中间	中等
右边	较粗 ( 出厂设置 )





## 11 维护与保养

### 11.1 一般性清洁

- 用柔软的湿布和普通洗洁剂来擦拭机器的外部。
- 定期清空、清洗接水盘（图A，序号1），至少当浮标溢出接水格后就需进行清洁。
- 定期清洗咖啡渣容器。
- 清洗牛奶发泡器：按箭头方向旋转牛奶发泡器（图F），然后用流水彻底进行冲洗。

#### ⚠ 小心!

- 不要使用任何类型的擦洗布、海绵或洗涤剂进行清洁，以防止损伤机器表面。
- 不要将接水盘置于洗碗机中进行清洗，否则可能会造成变形。

#### 📄 注意!

咖啡渣容器（图A，序号1内）可置于洗碗机中进行清洗。频繁地以洗碗机清洗会导致咖啡渣容器出现轻微变色的情况。



## 11.2 清洗烹煮器

事前准备：关机。（见第14页，开机和关机）

### 注意!

为了更好地保护您的机器，我们建议您每周清洗一次烹煮器。

- 把手伸进机器右侧的凹处（图A，序号14），然后向右拉出右盖板。
- 按住烹煮器手柄上的红色按钮（图B，序号1），按顺时针方向旋转手柄至停止状态（大约75°）。
- 利用手柄从机器中拉出烹煮器。
- 将烹煮器维持原状（不要移动或扭转烹煮器的部件）。
- 将烹煮器用流动水清洗，从各个侧面彻底进行冲洗。特别要确保图D所示的表面一定不能残留有咖啡残渣。烹煮器不能置于洗碗机中进行清洗。

### 小心!


烹煮器不能置于洗碗机中进行清洗。

- 让烹煮器滴干。
- 如有必要，清除机器内部烹煮器插装位置表面上的咖啡残渣。
- 将烹煮器重新装回机器中，逆时针旋转烹煮器手柄至停止位置，锁定烹煮器。
- 从机器右侧后面插入右盖板的四个挡片，然后向左摆动右盖板，直至右盖板锁紧。






### 11.3 综合清洁程序





综合清洁程序可清除无法用手清除的残渣，比如咖啡油残渣。综合清洁程序大约需要15分钟。清洗过程中，清洁图标  持续闪烁。

事前准备：关机。（见第14页，开机和关机）

#### ! 小心!


- 每隔两个月或每煮煮大约200杯咖啡之后就应运行综合清洁程序，至少当显示面板上清洁图标  亮起时就应运行综合清洁程序。
- 只能使用美乐家提供的全自动咖啡机专用清洁剂片。这些专用清洁剂片与美乐家拿铁全自动咖啡机精确匹配。如使用其它清洁剂片，会对机器造成损坏。

按照以下方法运行综合清洁程序：

- 1 打开水箱的盖子（图A，序号7），并向上拉动水箱直至从机器中取出。向水箱中加满水，直至最大刻度线，然后重新插入。
- 2 同时按下单杯按钮  和开/关机按钮  三秒钟以上。  
→ 清洁图标  持续闪烁。接水盘图标  亮起。
- 3 清空接水盘和咖啡渣容器。
- 4 重新插入接水盘，不带咖啡渣容器，而把咖啡渣容器置于咖啡出口下面。

#### 第一阶段

在第一阶段，显示器显示出一个咖啡豆图标 

→ 前两个自动冲洗周期运行，本机会自动出水两次。然后，待机图标  亮起。

- 5 把手伸进机器右侧的凹处（图A，序号14），然后向右拉出右盖板。
- 6 按住烹煮器手柄上的红色按钮（图B，序号1），按顺时针方向旋转手柄至停止状态（大约75°）。
- 7 利用手柄从机器中拉出烹煮器。





→ 烹煮器从机器中取出之后，待机图标  和清洁图标  交替闪烁。


### 小心!

小心损坏烹煮器。



– 清洁程序运行过程中，只能在规定时间取出烹煮器。

- 8 将烹煮器维持原状（不要移动或扭转烹煮器的部件）。
- 9 将烹煮器用水冲洗，从各个侧面彻底进行冲洗。
- 10 让烹煮器滴干。
- 11 向烹煮器中放置一片清洁片（图C）。
- 12 将烹煮器重新装回机器中，逆时针旋转烹煮器手柄至停止位置，锁定烹煮器。  
→ 第一阶段完成。

### 第二阶段

在第二阶段，显示器显示出两个咖啡豆图标 


→ 清洁图标  继续闪烁，待机图标  熄灭，水箱图标  亮起。

- 13 从机器右侧后面插入右盖板的四个挡片，然后向左摆动右盖板，直至右盖板锁紧。
- 14 打开水箱的盖子（图A, 序号7），并向上拉动水箱直至从机器中取出。向水箱中加满纯净水，直至最大刻度线，然后重新插入。
- 15 向下一直滑动咖啡出口（图A, 序号2）。
- 16 按下咖啡浓度按钮 ，继续运行综合清洁程序。  
→ 综合清洁程序继续运行，整个过程大约持续5分钟。水从咖啡出口处流出，同时经由咖啡机内部流入到接水盘。之后，接水盘图标  亮起。  
→ 第二阶段完成。





### 第三阶段


在第三阶段，显示器显示出三个咖啡豆图标 


17 清空接水盘和咖啡渣容器。

18 重新插入接水盘，不带咖啡渣容器，而把咖啡渣容器置于咖啡出口的下面。

→ 第三阶段完成。

### 第四阶段

在第四阶段，显示器显示出三个咖啡豆图标 。中间的咖啡豆图标闪烁。


→ 综合清洁程序继续运行，整个过程大约持续5分钟。水从咖啡出口处流出，同时经由咖啡机内部流入到接水盘。之后，接水盘图标  亮起。

19 清空接水盘和咖啡渣容器。重新插入接水盘以及咖啡渣容器。

→ 经过短暂的热机后，待机图标  亮起。机器准备运行。




## 11.4 综合除垢程序





综合除垢程序可清除机器内部的水垢。除垢程序总共大约需要25分钟。在整个过程中，除垢图标  持续闪烁。

事前准备：关机。（见第14页，开机和关机）


### ! 小心!


- 每隔三个月运行一次综合除垢程序，或者当显示面板上除垢图标  亮起时，应运行综合除垢程序。
- 只能使用美乐家提供的ANTI CALC Espresso Machines咖啡机专用除垢剂，这种除垢剂与美乐家拿铁全自动咖啡机精确匹配。
- 禁止使用醋液或其它除垢剂。

按照以下方法运行综合除垢程序：

- 1 除垢前，从水箱中取出美乐家Claris®滤水器（如有）。
- 2 取出牛奶粉末罐。
- 3 同时按下双杯按钮  和开/关机按钮  三秒钟以上。  
→ 除垢图标  闪烁。接水盘图标  亮起。

### 第一阶段

在第一阶段，显示器显示出一个咖啡豆图标 。

- 4 清空接水盘和咖啡渣容器。
- 5 在不带咖啡渣容器的情况下重新插入接水盘，同时把咖啡渣容器置于牛奶发泡器的下面。  
→ 水箱图标  亮起。
- 6 打开水箱的盖子（图A, 序号7），并向上拉动水箱直至从机器中取出，然后清空水箱。
- 7 依据包装上的说明将除垢剂（例如美乐家ANTI CALC Espresso Machines咖啡机液体除垢剂）装入水箱。






**警告!**

除垢剂会引起皮肤刺激。  
请遵照除垢剂包装说明书中规定的安全说明和用量。


8 重新插入水箱。

9 按下咖啡浓度按钮 ，开始综合除垢程序。

→ 综合除垢程序开始运行。水流经机器，按多个间隔流入接水盘中。这个过程大约需要15分钟。之后，牛奶发泡器图标  亮起。



→ 第一阶段完成。

**第二阶段**

在第二阶段，显示器显示出两个咖啡豆图标 

10 确保咖啡渣容器置于牛奶发泡器下面。


11 顺时针旋转牛奶发泡器的旋转开关（图A，序号11），使牛奶发泡器打开。

→ 水从牛奶发泡器中流出，进入咖啡渣容器。在这个过程中，牛奶发泡器图标  闪烁。之后，接水盘图标  亮起。

12 让牛奶发泡器保持打开状态。



13 清空咖啡渣容器和接水盘。

14 在不带咖啡渣容器的情况下重新插入接水盘，同时把咖啡渣容器置于牛奶发泡器的下面。

→ 水箱图标  亮起。

15 彻底冲洗水箱，然后加满纯净水至最大刻度线。

16 按下咖啡浓度按钮 ，继续运行综合除垢程序。


→ 水按多个间隔从牛奶发泡器中流出，进入咖啡渣容器。在这个过程中，牛奶发泡器图标  闪烁。之后，牛奶发泡器图标  亮起。

→ 第二阶段完成。





### 第三阶段

在第三阶段，显示器显示出三个咖啡豆图标 。

17 逆时针旋转牛奶发泡器的旋转开关，使牛奶发泡器关闭。

→ 水流经机器内部，进入接水盘。之后，接水盘图标  亮起。

18 清空接水盘，然后重新插入。

→ 经过短暂的热机后，待机图标  亮起。机器准备运行。

19 将美乐家Claris®滤水器重新插入水箱中。











## 12 运输和处置

### 12.1 运输准备、防冻保护以及长期不用的保护措施

#### 使机器内部的液体蒸发

如果机器长期弃置不用，我们建议您在运输前对机器进行干燥处理，这有助于防止机器由于结冻受到损坏。

事前准备：机器运行准备完成。（见第14页，开机和关机）

- 将美乐家Claris®滤水器从水箱中取出。
- 同时按下单杯按钮  和开/关机按钮  两秒钟以上。  
→ 经过短暂的热机后，待机图标  闪烁。之后，水箱图标  亮起。
- 打开水箱的盖子（图A，序号7），并向上拉动水箱直至从机器中取出。  
→ 牛奶发泡器图标  亮起。
- 在牛奶发泡器的下面放置接水容器。
- 顺时针旋转牛奶发泡器的旋转开关（图A，序号11），使牛奶发泡器打开。  
→ 热水从牛奶发泡器流出，进入接水容器，同时蒸汽溢出。牛奶发泡器图标  闪烁。

#### 警告！

小心高温蒸汽烫伤

在蒸发过程中，确保您不会被牛奶发泡器排出的热蒸汽烫伤。

- 当没有蒸汽溢出时，逆时针旋转牛奶发泡器的旋转开关，使牛奶发泡器关闭。  
→ 此时，机器已完全干燥。





### 注意!

美乐家Claris®滤水器不能长时间处在干燥状态。因此，如果长时间不使用机器，我们建议将美乐家Claris®滤水器保存在水中，然后置于冰箱中。

### 运输

- 彻底干燥机器（见第33页）。
- 清空接水盘和咖啡渣容器。
- 清空水箱和咖啡豆容器。如有必要，使用除尘器吸出难于清除的咖啡豆。
- 将美乐家Claris®滤水器从水箱中取出。
- 清洗烹煮器（见第26页）。
- 如可能，使用原包装运输机器，包括硬泡沫，以防止运输过程中造成损坏。

### 小心!

切勿使用低温冷藏车来运输此机器或储藏在低温房间内，这是因为残留的水分会结冻从而对机器造成损坏。







### 处置

- 如机器报废，请通过适当的收集系统使用环保方式进行处理。









## 13 故障排除

故障	原因	措施
咖啡只能一滴一滴地流出。	研磨精细度太细。	将研磨精细度设置到较粗水平。 清洗烹煮器。 如有必要，进行综合除垢处理。 如有必要，进行综合清洗程序。
咖啡无法流出。	水箱没有装水或错误安装。	把水箱装满水并确保其安装位置正确。如有必要，打开牛奶发泡器，直到水从机器中流出，然后关闭牛奶发泡器。
	烹煮器被堵塞。	清洗烹煮器。
研磨机不能研磨咖啡豆。	咖啡豆不能落入研磨机中（咖啡豆太油）	轻轻地拍打咖啡豆容器。
	研磨机中有异物。	拨打热线电话。
研磨机噪音大	研磨机中有异物。	拨打热线电话。
咖啡豆容器装满咖啡豆，但咖啡豆图标  仍然闪烁。	烹煮罐中的咖啡豆数量偏少	按下单杯按钮  或双杯按钮  。
清洁图标  和待机图标  交替闪烁	没有装烹煮器，或者安装不正确。	正确安装烹煮器。
	烹煮室过量。	使用开/关机按钮  关闭机器，然后重新启动（如有必要，重复此步骤），直到显示待机模式。





故障	原因	措施
牛奶发泡器图标  无规律亮起。	机器内部的管线中有空气存在。	打开阀门直到图标跳出，然后关闭阀门。关机，并取出烹煮器，用水冲洗，然后重新装入烹煮器。再次启动。然后，制作一杯最大量咖啡。
综合清洁，除垢程序自动中断	电源自动切断，例如：电压过高	按照说明书中的综合清洁除垢程序，继续完成相关操作
烹煮器取出后无法装回。	烹煮器锁定不牢。	检查烹煮器的锁紧机构的手柄是否正确锁止到位。
	驱动器没有在正确位置上。	关闭机器，然后重新启动。同时按下单杯和双杯操作按钮   两秒钟以上，此时驱动器会移动到位。然后重新插入烹煮器，检查是否正确锁紧到位。
所有按钮不断闪烁	系统故障	使用开/关机按钮  关闭机器，然后重新启动。如果问题仍然没有解决，请将机器送往维修机构。

如上述处理措施无效，请拨打美乐家服务热线电话：800-999-5859。





## 고객님께!

밀리타® 카페오® 라티아® 구입을 축하합니다.

커피 애호가이며 밀리타® 카페오® 라티아® 애용자인 귀하를 환영합니다.

고객님은 밀리타® 카페오® 라티아® 와 더불어 다양한 커피 경험을 즐기게 될 것입니다. 고객님이 좋아하는 커피 메뉴를 즐기면서나만의 커피 센스에 빠져보세요.

이 사용 설명서를 끝까지 주의 깊게 읽어 밀리타® 카페오® 라티아®와 더불어 오랫동안 커피 엔조이를 만끽하여 주시기 바랍니다.

이 사용 설명서는 후일을 위하여 안전한 장소에 잘 보관해주세요

이 커피 머신에 관한 더 많은 정보가 필요하신 분은 밀리타® 서비스 센터로 연락하시거나, 아래 인터넷 웹사이트를 방문하여 주십시오.

[www.melittakorea.com](http://www.melittakorea.com), [www.melitta.de](http://www.melitta.de).

신형 완전자동 커피 머신 밀리타® 라티아에 만족하시기를 바랍니다.

밀리타® 라티아 팀





## 목차

1	이 사용 설명서에 대한 정보 .....	40
1.1	이 사용 설명서에 표시된 표시기호 .....	40
1.2	올바른 사용 .....	41
1.3	부적절한 사용 .....	41
2	일반적 안전수칙 .....	42
3	제품 그림설명 .....	44
3.1	그림 A 설명 .....	44
3.2	디스플레이 .....	45
4	시작하기 .....	46
4.1	설치하기 .....	46
4.2	연결하기 .....	47
4.3	원두통 채우기 .....	47
4.4	밀크통 헹구기 .....	47
4.5	물통 채우기 .....	48
4.6	최초로 스위치 켜기 .....	48
4.7	커피 배출량 조정하기 .....	49
4.8	커피 강도 조정하기 .....	49
5	스위치 켜기 및 끄기 .....	50
5.1	제품 스위치 켜기 .....	50
5.2	제품 스위치 끄기 .....	50
6	밀리타® 클라리스® 정수필터 삽입 .....	51
7	에스프레소 혹은 카페 크레마 추출하기 .....	53
7.1	에스프레소 혹은 카페 크레마 한잔 추출하기 .....	53
7.2	에스프레소 혹은 카페 크레마 두잔 추출하기 .....	54
8	밀크 거품 만들기 .....	55
9	뜨거운 물 만들기 .....	56







10 기능 설정.....	57
10.1 물경도 .....	57
10.2 절전 모드 .....	58
10.3 자동-꺼짐 기능 .....	59
10.4 추출 온도 .....	60
10.5 제품을 공장출하 시 설정치로 복구하기 .....	61
10.6 분쇄 강도 .....	62
11 유지 관리.....	63
11.1 일반적인 청소 .....	63
11.2 커피 추출장치 청소 .....	64
11.3 자동 청소 프로그램 .....	65
11.4 자동 석회질제거 프로그램 .....	68
12 운반 및 폐기.....	71
12.1 운반, 동파방지 및 장기간 미사용에 따른 보호 조치.....	71
13 문제해결.....	73



## 1 이 사용 설명서에 대한 정보

제품 사용방법을 잘 숙지할 수 있도록 이 사용 설명서 표지 앞뒤에 있는 접힌 쪽을 잘 펴서 보세요

### 1.1 이 사용 설명서에 표시된 표시기호

사용 설명서에 있는 기호는 밀리타® 카페오® 라티아® 사용과 관련한 특별한 위험을 알려주거나 유익한 도움말을 제공합니다.

#### 경고!

경고표시는 안전수칙에 관한 정보와 사고, 상해 위험의 가능성을 설명합니다.

#### 주의!

주의표시는 반드시 피해야 할 부적절한 사용에 관한 정보를 포함하여 제품 손상 위험을 설명합니다.

#### 노트!

이 기호는 밀리타® 카페오® 라티아® 제품의 작동과 관련한 유익한 추가정보를 알려줍니다.





## 1.2 올바른 사용

밀리타® 라티아는 일반 커피 및 에스프레소를 제조하는데 사용하도록 특별히 제작된 제품입니다.

올바른 사용방법은 다음과 같습니다:

- 사용 설명서를 잘 읽고, 숙지하고, 따를 것.
- 특히 안전수칙을 잘 따를 것.
- 사용 설명서에 기술되어있는 사용조건에 합당하게 사용할 것.

## 1.3 부적절한 사용

사용 설명서에 기술된 내용과 다르게 밀리타®라티아를 사용하는 것은 부적절한 사용에 해당됩니다.

### 경고!

부적절하게 사용하면 뜨거운 물 혹은 스팀에 화상을 입을 수 있습니다.

### 노트!

제조자는 부적절한 사용으로 인한 배상책임을 지지 않습니다.



## 2 일반적 안전수칙

다음 사용 설명서를 끝까지 주의깊게 읽어주세요. 이를 숙지하지 않을 경우  
상해 또는 제품 손상을 초래할 수 있습니다.

### 경고!

- 다음과 같은 물품은 어린이의 손이 닿지 않는 곳에 두세요.  
포장재, 작은 부품류.
- 제품을 사용하는 모든 사람들은 사전에 사용 설명서는 물론 혹시 발생할지도 모를 위험에 대해 숙지하여야 합니다.
- 어린아이가 제품을 사용하거나 제품 근처에서 놀지 못하게 주의하여 주세요.
- 제품사용은 아동은 8세이상 그리고 신체적, 감각적 혹은 정신적 장애자 혹은 미숙자인 경우는 적절한 감독자의 감독하에 혹은 제품안전과 사고위험에 대한 숙지가된 경우에 한합니다. 어린아이들이 제품을 가지고 놀지않도록 해주세요. 또한 적절한 감독을 받지 않는 상태에서 신체적, 감각적 혹은 정신적 장애자 혹은 미숙자에 의한 제품의 청소및 유지관리 작업을 실행해서는 안됩니다.
- 제품은 이상이 없는 상태에서만 사용하여 주세요.
- 절대로 제품을 스스로 수리하려고 하지 마세요.  
수리가 필요할 때에는 지정 서비스 센터에 문의하여 주세요.
- 부품 및 액세서리를 비롯한 제품 일체에 어떠한 변경도 하지 마세요.





**! 경고!**

- 절대로 제품을 물에 담그지 마세요.
- 절대로 젖은 손이나 발로 제품을 접촉하지 마세요.
- 사용 중에 제품의 안쪽을 잡지 마세요.
- 제품이 가열되는 부분을 만지지 마세요.
- 사용 설명서에 분명히 명시된 경우 이외에는 절대로 사용 중 제품 우측 커버를 열지 마세요.
- 이 제품은 가정용 및 이와 유사한 용도에 한합니다:  
유사용도 예: 점포, 사무실 및 업소의 피고용자 키친;  
농장 설비; 호텔, 모텔 및 기타 숙박 설비 객실; 비앤비(B&B).
- 보증기간 내에 케이블 손상이 발생한 경우에는 제조업체에서 교환 받을 수 있고, 보증기간이 종료된 후에는 전문 기술자에 의한 유상수리를 받아야 합니다.
- 사용 설명서에 기술되어있는 기타 안전수칙을 따라주세요.



### 3 제품 그림설명

#### 3.1 그림 A 설명

그림 번호	설명
1	드립 트레이, 컵 받침대와 커피 찌꺼기 수거통(내장) 및 수위 표시기 ( 드립 트레이 상태 표시)
2	높이 조정가능 배출구
3	켜짐/꺼짐 버튼 ①
4	커피 추출량 조절기
5	한 잔 추출하기 버튼 ②
6	두 잔 추출하기 버튼 ③
7	물통
8	원두통
9	커피 강도 버튼 ④
10	디스플레이
11	밀크 샤워용 로터리 스위치
12	밀크 샤워
13	밀크통
14	우측 커버(탈착 가능, 분쇄강도 조절기, 추출장치 및 정격 표시판 내장)





### 3.2 디스플레이

기호	의미	디스플레이 표시	내용 설명/조치
	대기모드	깜박거림	제품 가열 중 혹은 커피 배출 중임
		불 켜짐	제품이 작동준비 상태에 있음
	밀리타®클라리스® 정수필터	불 켜짐	밀리타®클라리스® 정수필터를 교환해 주세요
		깜박거림	정수필터 교환 중
	물통	불 켜짐	물통을 채워 주세요n
		깜박거림	물통을 끼워 주세요
	드립 트레이와 커피 찌꺼기 수거통	불 켜짐	드립 트레이와 커피 찌꺼기 수거통을 비워 주세요
		깜박거림	드립 트레이와 커피 찌꺼기 수거통을 끼워 주세요
	커피 강도	불 켜짐	원두 1개: 순함 원두 2개: 보통 원두 3개: 강함
		깜박거림	원두통을 채워 주세요. 다음 번 커피 추출이 끝난 후 깜박거림이 멈춘다.
	청소하기	불 켜짐	제품을 청소해 주세요
		깜박거림	자동 청소 프로그램이 실행 중임
	석회질 제거하기	불 켜짐	자동 석회질 제거 프로그램을 실행 해주세요.
		깜박거림	자동 석회질 제거 프로그램이 실행 중임
	밀크 샤워와 온수 배출	불 켜짐	밀크 샤워를 열어 주세요
		깜박거림	밀크 샤워를 닫아 주세요

#### 노트!

디스플레이에 있는 모든 기호의 불빛이 희미하게 되면 제품이 절전 모드 상태입니다.



## 4 시작하기

제품을 처음 사용하기 전에 다음과 같은 작업을 실행하여 주세요.

아래 모든 작업을 완료하면 제품은 작동 준비가 된 상태입니다. 따라서 커피를 추출 할 수 있습니다. 제품을 처음 사용할 경우 위생상 처음 두 번까지 추출된 커피는 버리는 것이 좋습니다.

### 4.1 설치하기

- 제품은 물기가 없는 평평하고 안정된 곳에 두세요. 벽이나 다른 물체로 부터 약 10cm의 간격을 두세요.
- 밀리타® 카페오® 라티아® 제품 뒷쪽 끝에 롤러가 두개 달려 있습니다. 이것은 앞 쪽을 살짝 들어올려 제품을 쉽게 움직일 수 있도록 해줍니다.

#### ! 주의!

- 절대로 제품을 뜨거운 곳이나, 물기 있는 곳에 두지 마세요.
  - 동절기에 낮은 온도에서 제품을 운반하거나, 온도가 낮은 곳에 두지 마세요. 제품내 급수라인에 남아있던 물이 얼어서 제품에 손상을 초래할 수 있습니다.
- 커피 찌꺼기 수거통은 드립 트레이 안에 내장되어 있습니다. 드립 트레이는 제품 안쪽 끝까지 잘 끼워 졌는지 확인하여 주세요.

#### 📄 노트!

- 운반 또는 반송할 경우를 대비하여 포장재 일체를 잘 보관해 두세요.
- 제품을 처음 사용하기 전이라도 제품에 물이나 커피가 남아 있을 수 있습니다. 이는 제품 출고 시 이상이 없는지를 시험하기 때문이며, 제품이상이 아닙니다.







## 4.2 연결하기

- 전원 플러그를 제품규격에 맞는 소켓에 꽂아주세요..

### ⚠ 경고!

- 부적절한 전압, 부적절 혹은 손상된 소켓 및 전원 케이블을 사용하여, 전원을 연결하는 경우 화재 또는 감전 사고 위험이 있습니다.
- 사용장소의 공급전원이 정격표시판에 명시된 것과 합당하는지 확인해주세요.
  - 전기 공급원이 전기 안전규격에 적합한지를 점검하여 주세요. 안전성 여부가 확실하지 않으면 전기 기술자에게 문의하세요.
  - 절대로 손상된 전원 케이블(절연체가 벗겨 졌거나 동선이 외부로 나온 경우)을 사용하지 마세요.

## 4.3 원두통 채우기

- 원두통 뚜껑을 열고 신선한 커피 원두를 채워 주세요.

### ! 주의!

- 원두통에는 커피 원두만 넣어 주세요.
- 절대로 분쇄커피, 냉동-건조, 혹은 카라멜 시럽 처리된 원두를 넣지마세요.

- 원두통 뚜껑을 닫아 주세요.

## 4.4 밀크통 행구기

- 제품을 처음사용하기 전에 깨끗한 물로 밀크통을 행구어 주세요




#### 4.5 물통 채우기

- 물통 칸의 커버를 완전히 열고(그림 A, 번호 7) 물통을 꺼내 주세요.
- 물통을 깨끗한 물로 최대 표시까지 채우고 다시 제자리에 끼워 주세요.

##### 노트!

제품 가동 중(예를 들어 커피 배출 중)에 물통이 비면 물통 표시 기호가 나타납니다. 현재 실행 중인 작업은 종료됩니다. 다음 작업을 시작하기 전에 물통에 물을 채워 주세요.





#### 4.6 최초로 스위치 켜기

공장 출하 시 제품의 모든 배관 계통은 물이 빠지고 공기가 차있는 상태입니다. 따라서 제품에 처음 전원을 넣고 예열이 끝난 후 밀크 샤워 표시 기호 가 켜지면 공기 빼주기 작업을 해주어야 합니다. 이 공기 빼주기 작업은 제품을 최초로 사용할 경우에만 필요합니다.

##### 주의!


클라리스® 정수필터를 끼지 않은 상태로 물통에 물이 가득 채운 후 공기 빼주기 작업을 실시하여 주세요.

- 반드시 공기 빼주기 작업을 실시한 후 정수필터를 끼워 주세요
- 공기 빼주기 작업을 실시하기 전에 물통에 물을 최대 표시까지 채워 주세요.

- 켜짐/꺼짐 버튼  을 눌러 전원을 넣어 주세요.  
→ 대기모드 표시기호  가 깜박거립니다. 예열이 시작됩니다.  
예열이 끝나면 밀크 샤워 표시기호  가 켜집니다.
- 밀크통을 떼어내고 밀크 샤워 아래에 용기를 놓아 주세요.
- 밀크 샤워용 로터리 스위치(그림 A, 번호 11)를 시계방향으로 돌려 밀크 샤워를 열어 주세요.  
→ 밀크 샤워 표시기호  가 깜박거립니다. 밀크 샤워 아래에 있는 용기 속으로 물이 흘러 들어갑니다.







- 물이 더 이상 배출구로 흘러나오지 않고 밀크 샤워기 기호  가 켜지면, 밀크 샤워기용 로터리 스위치를 반시계방향으로 돌려 밀크 샤워기를 닫아주세요.  
→ 제품은 작동준비 상태입니다.


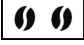

#### 4.7 커피 배출량 조정하기

- 커피량 조절기(그림A, 번호 4)를 돌려서 추출되는 커피량을 조절할 수 있습니다(조절기를 왼쪽으로 돌리면 커피량이 감소하고, 오른쪽으로 돌리면 커피량이 증가합니다).

커피 배출량	조절기를 완전히 왼쪽으로	조절기를 중간으로	조절기를 완전히 오른쪽으로
한 잔 만들 경우	30ml	125ml	220ml
두 잔 만들 경우	2x30ml	2x125ml	2x220ml

#### 4.8 커피 강도 조정하기

- 커피 추출 강도 조절 버튼  을 반복하여 눌러서 원하는 커피 추출 강도를 선택하여 주세요.  
→ 선택한 강도가 디스플레이에 원두 표시기호  로 표시됩니다.

디스플레이	커피 강도
	순함
	보통 (공장 출하시)
	강함

- 커피 분쇄기의 분쇄정도를 조절하여서도 커피 향을 변경할 수 있습니다 상세한 내용은 62쪽을 참조하세요.





## 5 스위치 켜기 및 끄기

### 5.1 제품 스위치 켜기



#### 노트!

제품은 스위치를 켤 때마다 자동행굼을 실시합니다.

- 배출구 아래에 용기를 놓아두세요.
- 켜짐/꺼짐 버튼 ① 을 눌러 제품 스위치를 켜주세요.  
→ 대기 모드 ① 가 점멸합니다. 제품이 예열됩니다. 제품은 자동행굼을 실시하고 배출구로 뜨거운 물이 흘러나옵니다. 그리고나서 대기 모드 표시기호 ① 에 불이 켜집니다. 제품은 작동준비 상태입니다.

### 5.2 제품 스위치 끄기


- 배출구 아래에 용기를 놓아두세요.
- 켜짐/꺼짐 버튼 ① 을 눌러 제품 스위치를 켜주세요.  
→ 자동적으로 커피 경로를 행구어줍니다. 추출장치는 원위치로 돌아갑니다. 대기 모드 기호 ① 가 꺼집니다.





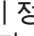





## 6 밀리타® 클라리스® 정수필터 삽입

석회질 및 기타 오염물질을 여과해주는 밀리타® 클라리스® 정수필터가 제품과 함께 제공됩니다. 이것은 반드시 제품을 최초로 가동개시한 이후에 삽입하여 주세요.


밀리타 클라리스 정수필터를 사용하면 석회질 제거 작업을 자주 해 줄 필요가 없으며, 물의 경도는 레벨 1로 자동 설정됩니다 (57쪽을 참조하세요). 정수필터를 사용하면 석회질 축적이 크게 줄어들어 제품수명이 길어집니다. 정수필터는 정기적 (2 개월에 한 번) 으로 교환해주어야 하며, 아무리 늦어도 디스플레이에 정수필터 표시기호  가 켜지면 교환해 주어야 합니다.

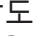
선행조건: 제품은 반드시 스위치가 꺼져 있어야 합니다 (50쪽 „스위치 켜기 및 끄기“ 참조)



- 커피 추출 강도 버튼  과 켜짐/꺼짐 버튼  을 동시에 2초 이상 눌러주세요.
  - 교환 작업이 완료될 때까지 정수필터 표시기호  가 깜박거립니다. 드립 트레이 표시기호  가 켜집니다.
- 드립 트레이를 비운 다음 다시 끼워 주세요
  - 물통 표시기호  가 켜집니다.
- 정수필터는 삽입하기 전에 깨끗한 물을 담은 컵에 수분 동안 담궈 두세요.
- 물통 칸의 커버를 열고 물통을 꺼내 주세요.
- 물통을 비워 주세요
- 밀리타® 클라리스® 정수필터를 물통 바닥에 있는 나사에 끼워 주세요
- 물통에 물을 최대 표시까지 채운 다음 다시 제자리에 넣어 주세요
  - 밀크 샤워 표시기호  가 켜집니다.
- 밀크통을 떼어내고 밀크 샤워 아래에 큰 용기를 놓아 주세요.
- 밀크 샤워용 로터리 스위치(그림 A, 번호 11)를 시계방향으로 돌려 밀크 샤워를 열어 주세요.





→ 밀크 샤워 표시기호  가 점멸하며 물이 밀크 샤워 아래 용기 속으로 흘러 들어 갑니다.

- 물이 더 이상 나오지 않으면 밀크 샤워 표시기호  가 켜집니다. 밀크 샤워용 로터리 스위치를 시계 반대방향으로 돌려 밀크 샤워를 닫아 주세요.

→ 이어서 대기모드 표시기호  와 원두 표시기호  가 켜집니다. 밀크 샤워용 로터리 스위치를 반시계 방향으로 돌려 밀크 샤워를 닫아 주세요.

#### 노트!

- 밀리타® 클라리스® 정수필터는 장기간 건조한 상태로 두면 안 됩니다. 따라서 장기간 제품을 사용하지 않을 경우에는 정수필터를 물컵 속에 담근 채 냉장고에 넣어 둘 것을 권장합니다.
- 밀리타® 클라리스® 정수필터를 처음 삽입하면, 정수필터 내 과잉 활성탄이 밖으로 흘러 나오며 필터가 행구어 집니다. 이리하여 행굼물이 약간 회색 빛을 띌 수 있으나, 그 후 물은 다시 깨끗해 집니다.









## 7 에스프레소 혹은 카페 크레마 추출하기

### 7.1 에스프레소 혹은 카페 크레마 한잔 추출하기

제품은 반드시 작동준비 상태에 있어야 합니다  
(50쪽 „스위치 켜기 및 끄기“ 참조).

- 커피 잔을 배출구 아래에 놓아 주세요.
- 커피 추출 강도 버튼  을 눌러 추출 강도를 선택해 주세요.
- 커피 추출량 조절기(그림 A, 번호 4)를 돌려 커피 추출량을 조절하여주세요.
- 한 잔 추출하기 버튼  을 눌러 주세요
  - 커피 분쇄과정에 이어서 커피가 추출되기 시작합니다.  
대기모드 표시기호  가 점멸합니다. 미리 설정한 높은 추출량에 도달하면 커피 추출이 자동으로 종료됩니다.
- 커피 추출량을 중간에 미리 종료하고 싶으면 한 잔 추출하기 버튼  을 다시 눌러 주세요.





#### 노트!

- 제품을 처음 사용할 경우에는 분쇄시간이 정상보다 더 오래 소요됩니다.
- 커피 추출 중에도 커피량을 조절 할 수 있습니다. 커피 추출량을 줄이려면 커피 추출량 조절기를 왼쪽으로 돌려 원하는 분량으로 설정하거나, 혹은 추출이 멈출 때까지 돌려주면 됩니다. 추출량을 늘이려면 조절기를 오른쪽으로 돌려 주세요.



## 7.2 에스프레소 혹은 카페 크레마 두잔 추출하기

선행조건: 제품은 반드시 작동준비 상태에 있어야 합니다  
(50쪽 „스위치 켜기 및 끄기“ 참조).

- 배출구 아래 각각 두개의 용기를 놓아주세요
- 커피 잔 두 개를 배출구 아래에 놓아 주세요.
- 커피 추출 강도 버튼  을 눌러 추출 강도를 선택해 주세요.
- 커피 추출량 조절기(그림 A, 번호 4)를 돌려 커피 추출량을 조절하여주세요.
- 두 잔 추출하기 버튼  을 눌러 주세요
  - 이중 분쇄과정에 이어서 커피가 추출되기 시작합니다.  
대기모드 표시기호  가 점멸합니다. 미리 설정해 놓은 추출량에 도달하면 커피 추출이 자동으로 종료됩니다.
- 커피 추출과정을 중간에 미리 종료하고 싶으면 두 잔 추출하기 버튼  을 다시 눌러 주세요.



### 노트!

- 제품을 처음 사용할 경우에는 분쇄시간이 정상보다 더 오래 소요됩니다.
- 커피 추출 중에도 커피 분량을 조절 할 수 있습니다. 커피 추출 분량을 줄이려면 커피 추출량 조절기를 왼쪽으로 돌려 원하는 분량으로 설정하거나, 혹은 추출이 멈출 때까지 돌려주면 됩니다. 추출분량을 늘이려면 조절기를 오른쪽으로 돌려 주세요.








## 8    밀크 거품 만들기


선행조건: 제품은 반드시 작동준비 상태에 있어야 합니다  
(50쪽 „스위치 켜기 및 끄기“ 참조).

- 밀크통 아래에 용기(예를 들면, 라떼 마키아또 글라스)를 놓아 주세요.
- 밀크통을 떼어 내어 밀크 파우더를 채워 주세요. 밀크통을 밀크 샤워 아래 마그네틱(자석) 포인트에 붙여 주세요(그림 A, 번호 13).
- 밀크 샤워용 로터리 스위치를 시계방향으로 돌려 밀크 샤워를 열어 주세요.
  - 밀크 샤워 표시기호  가 깜박거립니다. 약 90ml의 온수가 밀크통으로 흘러 들어가 거품을 발생시킵니다. 밀크 거품은 밀크통을 넘쳐 흘러 아래 쪽 용기 속으로 들어 갑니다. 약 90ml의 물이 흘러 내린 후 물 흐름이 멈춥니다.
- 밀크 샤워용 로터리 스위치를 반시계 방향으로 돌려 밀크 샤워를 닫아 주세요 (밀크 거품이 소량 필요한 경우에는 미리 닫아 주면 됩니다)
- 이제 여기에 바로 커피 추출을 시작해 주세요 (예를 들어, 라떼 마키아또 제조)



## 9 뜨거운 물 만들기

선행조건: 제품은 반드시 작동준비 상태에 있어야 합니다  
(50쪽 „스위치 켜기 및 끄기“ 참조).

- 밀크통을 떼어내고 밀크 샤워 아래에 용기를 놓아 주세요.
- 밀크 샤워용 로터리 스위치를 시계방향으로 돌려 밀크 샤워를 열어 주세요.
  - 밀크 샤워 표시기호  가 깜박거립니다. 약 90ml의 온수가 밀크 샤워 밖으로 흘러 나와 아래 쪽 용기 속으로 들어 갑니다.  
밀크 샤워를 닫으면 언제든지 물 흐름이 멈춥니다.
- 밀크 샤워용 로터리 스위치를 반시계 방향으로 돌려 밀크 샤워를 닫아 주세요.
- 온수가 더 필요하다면 이 과정을 반복하여 주세요.





## 10 기능 설정

### 10.1 물경도

제품과 함께 공급된 테스트용 스트립을 사용하여 거주 지역의 물 경도를 알아 볼 수 있습니다. 테스트용 스트립 포장지에 있는 설명에 따라 주세요. 공장 출하 시 제품은 경도 4로 조정되어 있습니다. 밀리타® 클라리스®정수 필터를 사용하면, 자동으로 물 경도 1로 설정됩니다.

선행조건: 제품은 반드시 작동준비 상태에 있어야 합니다 (50쪽 „스위치 켜기 및 끄기“ 참조).

제품 성능을 유지할 수 있도록 다음과 같이 물 경도를 조절하여 주세요.

- 한 잔 추출하기 버튼 과 두 잔 추출하기 버튼 을 동시에 2 초 이상 눌러 주세요.  
→ 대기모드 표시기호 가 급속하게 점멸합니다.
- 한 잔 추출하기 버튼 을 눌러 물 경도 조절 메뉴를 디스플레이에 불러 오세요.  
→ 정수필터 표시기호 가 켜집니다.
- 커피 추출 강도 버튼 을 반복하여 눌러 4개의 선택 가능한 물 경도 중에서 선택하여 주세요.  
→ 선택한 물 경도에 따라 디스플레이에 원두 표시기호 로 표시 됩니다.

물경도 범위	속성	°d	°e	°f
1:	부드러움	0-10	0-13	0-18
2:	중간	10-15	13-19	18-27
3:	강함	15-20	19-25	27-36
4:  점멸	매우 강함 (공장 출하시)	> 20	> 25	> 36



- 커짐/꺼짐 버튼 ① 을 눌러 선택한 물 경도를 확인하여 주세요.  
→ 디스플레이 내에 있는 모든 표시기호가 잠깐 확인 점멸합니다.  
제품은 작동준비 상태에 있으며, 대기모드 표시기호 ① 이 켜집니다.

#### 노트!

조정 작업 중 60초 이내에 버튼을 누르지 않으면 제품은 자동으로 대기모드로 전환됩니다.

## 10.2 절전 모드

마지막 동작이 끝나면, 제품은 자동적으로 절전 모드(설정에 따라)로 바뀝니다 (이리하여 대기 모드 보다 훨씬 더 절전됩니다). 절전 모드 전환시간을 선택할 수 있습니다. 공장 출하 시 설정치는 5분 입니다.

선행조건: 제품은 반드시 작동준비 상태에 있어야 합니다 ( 페이지 50참조.

타이머 조정은 다음과 같이 해주세요

- 한 잔 추출하기 버튼 ② 과 두 잔 추출하기 버튼 ③ 을 동시에 2초 이상 눌러 주세요.  
→ 대기모드 표시기호 ① 가 깜박거립니다.
- 한 잔 추출하기 버튼 ② 을 2 번 눌러 디스플레이에 절전 대기모드 메뉴를 불러 오세요.  
→ 물통 표시기호 ④ 가 켜집니다.
- 커피 추출 강도 버튼 ⑤ 을 여러 번 눌러 4 가지 선택 가능한 시간 중에서 선택하여 주세요.





디스플레이	시간
	5 분 (공장 출하 시)
	15 분
	30 분
점멸	꺼짐

- 커피/꺼짐 버튼 ① 을 눌러 선택한 시간을 확인하여 주세요.  
→ 디스플레이 내에 있는 모든 표시기호가 잠깐 확인 점멸합니다.  
제품은 작동준비 상태에 있으며 대기모드 표시기호 ① 가 켜집니다.

### 10.3 자동-꺼짐 기능

자동 꺼짐 기능을 선택할 수 있습니다. 공장출하 시 설정치는 30 분입니다입니다.타이머 조정은 다음과 같이 해주세요

선행조건: 제품은 반드시 작동준비 상태에 있어야 합니다  
(50쪽 „스위치 켜기 및 끄기“ 참조)

다음과같이 타이머를 조정해주세요

- 한 잔 추출하기 버튼 ② 과 두 잔 추출하기 버튼 ③ 을 동시에 2 초 이상 눌러 주세요.  
→ 대기모드 표시기호 ① 가 깜박거립니다.
- 한 잔 추출하기 버튼 ② 을 3 번 눌러 디스플레이에 자동 꺼짐 기능 메뉴를 불러 오세요.  
→ 드립 트레이 표시기호 ④ 가 켜집니다.
- 커피 강도 버튼 ⑤ 을 여러 번 눌러 4개 중에서 선택하여 주세요





디스플레이	시간
	30 분 (공장 출하시)
	2 시간
	4 시간
점멸	8 시간

- 커짐/꺼짐 버튼 을 눌러 선택한 시간을 확인하여 주세요.  
→ 디스플레이내 모든 기호가 잠시 확인 점멸합니다.  
드립 트레이 표시기호 가 켜집니다

#### 10.4 추출 온도

공장 출하 시 레벨 2 (중간)로 설정되어 있습니다.

선행조건: 제품은 반드시 작동준비 상태에 있어야 합니다  
(50쪽 „스위치 켜기 및 끄기“ 참조).

필요에 따라 다음과같이 추출온도를 설정할 수 있습니다.

- 한 잔 및 두 잔 추출 버튼을 동시에 2초이상 눌러주세요.
- 한 잔 추출하기 버튼 을 4 번 눌러 디스플레이에 커피 추출 온도메뉴를 불러 오세요.  
→ 청소 표시기호 가 깜박거립니다.
- 커피 추출 강도 버튼 을 여러 번 눌러 3 가지 선택 가능한 커피 추출 온도중에서 선택하여 주세요.

디스플레이	추출 온도
	낮음
	중간 (공장 출하시)
	높음





- 커짐/꺼짐 버튼 ① 을 눌러 선택한 시간을 확인하여 주세요.  
 → 디스플레이 내에 있는 모든 표시기호가 잠깐 확인 점멸합니다.  
 제품은 작동준비 상태에 있으며 대기모드 표시기호 ① 가 켜집니다

### 10.5 제품을 공장출하 시 설정치로 복구하기

선행조건: 제품은 반드시 작동준비 상태에 있어야 합니다  
 (50쪽 „스위치 켜기 및 끄기“ 참조).

- 커피 추출강도 버튼 ② 과 커짐/꺼짐 버튼 ① 을 동시에 2 초 이상 눌러 주세요  
 → 모든 설정치가 공장 출하시의 값으로 복구됩니다. 대기모드 표시기호 ① 가 잠깐 확인 점멸합니다.

#### 공장출하 시 설정치

기능 설정	공장 설정
물경도	물경도 4
절전 모드	5 분 ②
자동 꺼짐기능	30 분 ) ②
커피 추출온도	중간 ② ②



## 10.6 분쇄 강도

분쇄강도는 공장 출하 시 최적으로 설정되어 있습니다. 따라서 커피를 약 1,000잔 추출한 이후 필요에 따라 분쇄 강도를 재조정해 줄 것을 권장합니다(약 1년).

분쇄기가 작동하고 있을 동안에만 분쇄 강도를 조정할 수 있습니다. 따라서, 커피 추출이 시작된 후 바로 분쇄 강도를 조정하여 주세요.

커피 향이 원하는 만큼 강하지 않을 경우 분쇄 강도를 더 미세하게 조정해 볼 것을 권장합니다.

- 제품 우측(그림 A, 번호 14)의 커버를 열어 주세요.
- 정상적인 커피 추출을 시작해 주세요
- 분쇄기가 작동 중일 동안에: 레버를 3 위치 중 하나로 선택하여 주세요.(그림 E)
- 제품 우측 커버 캐처를 뒤쪽 해당 홀에 각각 끼우고 커버를 잘 닫아 주세요.

레버 위치	분쇄 강도
왼쪽	미세함
중간	중간
오른쪽	거침 (공장 출하 시 설정치)







## 11 유지 관리

### 11.1 일반적인 청소

- 제품의 외관은 부드러운 천을 적셔 조심스럽게 닦아 주세요.
- 드립 트레이는 정기적으로 비우고 청소해야 하며 최소한 수위 표시기가(그림A, 1 번) 그릴 위로 올라오면 반드시 비워 주어야 합니다.
- 커피 찌꺼기 수거통을 정기적으로 청소해 주세요.

#### ⚠ 주의!

- 제품표면을 손상시키는 마포, 스펀지, 세척도구 등을 사용하지 마세요.
- 드립 트레이를 식기 세척기로 세척하지 마세요. 형태가 변형될 수 있습니다.

#### 📄 노트!

커피 찌꺼기 통(그림 A, 번호 1)을 식기 세척기로 자주 세척하면 색상이 변할 수 있습니다



## 11.2 커피 추출장치 청소

선행조건: 제품은 반드시 작동준비 상태에 있어야 합니다  
(50쪽 „스위치 켜기 및 끄기“ 참조).

### 노트!

제품이 최적 상태를 유지할 수 있도록 일주일에 한번씩 추출 장치를 청소해주는 것이 좋습니다.

- 제품 우측에 있는 손잡이(그림 A, 번호 14)를 잡고 커피 추출장치 커버를 열어 주세요.
- 추출장치 손잡이의 적색 버튼을 누른채(그림 B, 1 번) 손잡이를 시계방향으로 끝까지 돌려주세요 (약 75도).
- 추출장치 손잡이를 사용하여 추출장치를 제품 밖으로 꺼내 주세요.
- 추출장치를 그대로 두세요 ( 부품을 움직이거나 비틀지 마세요).
- 추출장치의 모든 부분을 흐르는 물로 철저히 씻어주세요. 특히 그림 D에 보이는 표면에 커피 찌꺼기가 남아있지 않도록 확인해주세요 .

### 주의!


절대로 추출장치를 식기 세척기에 넣지 마세요.

- 추출장치가 건조되도록 그대로 두세요.
- 추출장치가 삽입되는 제품 안쪽 표면에 커피 찌꺼기가 남아 있는 경우 깨끗이 닦아 내세요.
- 추출장치를 제자리에 도로 끼우고 빨간 버튼을 누른 채 손잡이를 반시계 방향으로 돌려 완전히 끼워 주세요.
- 제품 우측 커버 켓처를 제품 뒤쪽 해당 홀에 각각 끼우고 커버를 잘 닫아 주세요.






### 11.3 자동 청소 프로그램


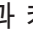


자동 청소 프로그램은 손으로는 제거할 수 없는 커피 기름을 포함한 찌꺼기를 제거해 줍니다. 이 프로그램은 약 15분이 소요됩니다. 전 과정 중 청소기호  가 점멸합니다.

실행조건: 제품은 반드시 작동준비 상태에 있어야 합니다  
(50쪽 „스위치 켜기 및 끄기“ 참조)


#### ! 주의!


- 자동 청소 프로그램은 2 개월 마다 혹은 커피 약 200잔을 추출한 후에는 반드시 실행하여 주세요. 또한 디스플레이에 청소 표시기호  가 켜지면 반드시 자동 청소 프로그램을 실행하여 주세요.
- 밀리타®가 공급하는 자동 커피 머신 청소용 세제만 사용하세요. 이 세척제는 특별히 밀리타® 커피오® 라티아®용으로 제조된 것입니다. 다른 세척제를 사용하면 제품에 손상을 줄 수 있습니다.

다음과 같이 자동 청소 프로그램을 실행하여 주세요:

- 1 물통 간의 커버를 열고 물통(그림 A, 번호 7)을 꺼내 주세요.  
물통에 물을 최대 표시까지 채워 주세요.
- 2 한 잔 추출하기 버튼  과 켜짐/꺼짐 버튼  을 동시에 2 초 이상 눌러 주세요.  
→ 전 과정 중 청소 표시기호  이 깜박거립니다.  
드립 트레이 표시기호  가 깜박거립니다.
- 3 드립 트레이와 거피 찌꺼기 수거통을 비워 주세요.
- 4 커피 찌꺼기 수거통을 뺀 채 드립 트레이를 다시 끼우고 커피 찌꺼기 수거통을 커피 배출구 아래에 놓아 주세요.


#### 1 단계

1 단계 중, 디스플레이에 1 개 원두 기호  가 표시됩니다.

- 먼저 두 번의 자동세척이 실행됩니다.  
그리고 나서 대기모드 표시기호  가 켜집니다.








- 5 제품 우측에 있는 손잡이(그림 A, 번호 14)를 잡고 커피 추출장치 커버를 열어 주세요.
- 6 커피 추출장치 손잡이에 있는 빨간 버튼(그림 B, 번호 1))을 누른 채 손잡이를 반시계 방향으로 돌려 주세요(약 75도 정도).
- 7 추출장치 손잡이를 사용하여 추출장치를 제품 밖으로 꺼내 주세요.
  - 추출장치가 제품 밖에 나와있는 동안에는 대기모드 표시기호 ①와 청소 표시기호  가 번갈아 점멸합니다.

**! 주의!**

**추출장치 손상 위험**


- 청소 프로그램 실시 중 추출장치는 밖으로 꺼내라고 명시한 경우에 한하여 그렇게 해주세요.


- 8 추출장치 부품을 움직이거나 비틀지 말고 있는 그대로 청소해 주세요.
- 9 흐르는 물로 추출장치의 모든 방향을 깨끗이 세척해주세요. 특히 그림 D 에 보이는 표면에 커피 찌꺼기가 남아 있지 않도록 유의 하여 주세요. 추출장치를 식기 세척기에 넣지 마세요.
- 10 추출장치가 건조되도록 그대로 두세요.
- 11 추출장치에 세척제를 넣어 주세요(그림 C)
- 12 추출장치를 제자리에 도로 끼우고, 빨간 버튼을 누른 채 손잡이를 반시계 방향으로 완전히 잠길 때까지 돌려주세요.
  - 1 단계가 끝났습니다
  - 2 단계 중, 디스플레이에 원두 2개 표시기호  가 표시됩니다
    - 청소 표시기호  가 계속하여 깜박거리고, 대기모드 표시기호 ①가 꺼집니다. 물통 표시기호  가 켜집니다.
- 13 커피 추출장치 커버 컷처를 제품 뒤쪽 해당 홀에 각각 끼우고 커버를 잘 닫아 주세요.
- 14 물통 칸 커버를 열고 (그림 A, 번호 7) 물통을 꺼내어 물을 최대 표시까지 채우고 다시 끼워주세요.






15 커피 배출구(그림A, 2 번)를 아래로 쪽 내려 주세요.

16 커피 추출강도 버튼  을 눌러 자동 청소 프로그램을 실행하여 주세요.

→ 자동 청소 프로그램이 계속됩니다. 이 과정은 약 5분간 지속됩니다.  
물이 커피 배출구로 흘러 나올 뿐만 아니라 제품 안쪽  
드립 트레이 안으로도 흘러내립니다. 드립 트레이 표시기호  가 표시됩니다.

→ 2 단계가 끝났습니다

### 3 단계


3 단계 중, 디스플레이에 원두 3개 표시기호  가 표시됩니다

17 드립 트레이와 커피 찌꺼기 수거통을 비워주세요


18 커피 찌꺼기 수거통을 뺀 채 드립 트레이를 다시 끼우고 커피 찌꺼기 수거통을 커피 배출구 아래에 놓아 주세요

→ 3 단계가 끝났습니다.


### 4 단계

4 단계 중, 디스플레이에 원두 3개 표시기호  가 표시 됩니다.

중간에 있는 원두 표시기호가 점멸합니다.

→ 자동 청소 프로그램이 계속됩니다. 이 과정은 약 5분 지속됩니다.  
물이 제품 안쪽 드립 트레이와 커피 배출구로 흘러내립니다.  
이어서 드립 트레이 표시기호  가 켜집니다.


19 드립 트레이와 커피 찌꺼기 수거통을 비워준 다음 다시 끼워주세요.

→ 잠시 예열이 된후 대기모드 표시기호  가 켜집니다.  
제품은 작동 준비상태입니다.






## 11.4 자동 석회질제거 프로그램





내장되어 있는 자동 석회질 제거 프로그램은 제품 내 축적된 석회질을 제거해 줍니다. 이 과정은 약 25분 소요됩니다. 프로그램 실행 중 내내 석회질 제거 표시기호 가 깜박거립니다.

실행조건: 제품은 반드시 스위치가 꺼져 있어야 합니다  
(50쪽 „스위치 켜기 및 끄기“ 참조)



### ! 주의!

- 내장 석회질 제거 프로그램은 3개월 마다 혹은 석회질 제거 기호 가 켜지면 실행하여 주세요.
- 밀리타® 안티 칼크 에스프레소 머신 석회질 제거제만 사용해 주세요. 이것은 특별히 밀리타® 카페오® 라티아® 용으로 제조된 것입니다.
- 절대로 식초나 기타 다른 석회질 제거 세제를 사용하지 마세요.

다음과 같이 자동 석회질 제거 프로그램을 실행해주세요:

- 1 석회질제거를 실행하기전에 밀리타® 클라리스® 정수필터를 제거해 주세요.
- 2 밀크통을 떼어내 주세요.
- 3 두 잔 추출하기 버튼  과 켜짐/꺼짐 버튼  을 동시에 3초 이상 눌러 주세요.  
→ 석회질 제거 표시기호 가 깜박거리고, 드립 트레이 표시기호 가 켜집니다.

### 1 단계

- 1 단계 중, 디스플레이에 원두 1개 표시기호 가 표시됩니다.
- 4 드립 트레이와 커피 찌꺼기 수거통을 비워주세요
- 5 드립 트레이를 비우고 커피 찌꺼기 수거통을 뺀 채 다시 끼운 다음 커피 찌꺼기 수거통을 밀크 샤워 아래에 놓아주세요.  
→ 물통 표시기호 가 켜집니다.







- 6 물통 간의 커버(그림 A, 번호 7)를 열고 물통을 꺼내어 완전히 비워주세요.
- 7 별도 용기에 온수를 약 0.5ℓ 준비하여 석회질 제거용 가루를 여기에 넣고 긴 스푼으로 저어 주세요. 석회질 제거용 가루가 완전히 용해되면 이 용액을 물통에 부어 주세요(액상 제거제인 경우 포장지에 있는 사용 설명서에 따라주세요)







### 경고!

석회질 제거제는 피부 자극을 유발할 수 있습니다.  
제품포장에 설명되어 있는 안전수칙 및 사용량을 지켜 주세요.

- 8 물통을 다시 끼워 주세요.
- 9 커피 추출 강도 버튼  을 눌러 주세요.
  - 자동 석회질 제거 프로그램이 시작됩니다. 물이 제품 내부로 흘러 여러 차례 드립 트레이에 떨어집니다. 이 과정은 약 15분 동안 지속됩니다. 이어서 밀크 샤워 표시기호  가 켜집니다.
  - 1 단계가 끝났습니다


### 2 단계



- 2 단계 중, 디스플레이에 원두 2개 표시기호  가 표시됩니다.
- 10 커피 찌꺼기 수거통이 밀크 샤워 바로 아래에 있는지 확인해주세요.
  - 11 밀크 샤워용 로터리 스위치를 시계방향으로 돌려 밀크 샤워를 열어주세요.
    - 물이 밀크 샤워에서 커피 찌꺼기 수거통으로 흘러내립니다. 이 과정 내내 밀크 샤워 표시기호  가 점멸합니다. 이어서, 드립 트레이 표시기호  가 켜집니다.
  - 12 밀크 샤워를 그대로 열어 두세요.
  - 13 드립 트레이와 커피 찌꺼기 수거통을 비워주세요.
  - 14 커피 찌꺼기 수거통을 뺀 채 드립 트레이를 다시 끼우고 커피 찌꺼기 수거통을 다시 밀크 샤워 아래에 놓아 주세요.
    - 물통 표시기호  가 켜집니다.






15 물통을 철저히 씻은 후 최대 표시까지 물을 채워주세요

16 커피 추출강도 버튼  를 눌러 자동 석회질 제거 프로그램을 계속하여주세요.


→ 물이 여러 차례에 걸쳐 밀크 샤워를 통하여 커피 찌꺼기 수거통으로 흘러 나옵니다. 이 과정 중 밀크 샤워 표시기호  가 점멸합니다. 이어서, 밀크 샤워 표시기호  가 켜집니다.

→ 2 단계가 끝났습니다.


3 단계

3 단계 중, 디스플레이에 원두 3개 표시기호  가 표시됩니다.

17 밀크 샤워용 로터리 스위치를 반시계 방향으로 돌려 밀크 샤워를 닫아 주세요.

→ 물이 제품 내부 드립 트레이로 흘러 내립니다. 이어서, 드립 트레이 표시기호  가 켜집니다.

18 드립 트레이와 거품 찌꺼기 수거통을 비워주세요

→ 잠시 제품이 예열된 후 대기모드 표시기호  가 켜집니다. 제품은 작동 준비상태입니다.

19 밀리타® 클라리스 정수필터를 다시 끼워주세요.












## 12 운반 및 폐기

### 12.1 운반, 동파방지 및 장기간 미사용에 따른 보호 조치

#### 제품 내부 물기 제거하기


제품을 장기간 사용하지 않을 경우 및 운송하기 전에 제품내 물기를 제거해 주는 것이 좋습니다. 이것은 제품의 동파사고를 방지하기 위함입니다.

선행조건: 제품은 반드시 작동준비 상태에 있어야 합니다  
(50쪽 „스위치 켜기 및 끄기“ 참조)

- 밀리타® 클라리스® 정수필터를 물통에서 꺼내 주세요.
- 한 잔 추출하기 버튼  과 켜짐/꺼짐 버튼  을 동시에 2초 이상 눌러 주세요.
  - 잠시 예열 후 대기모드 표시기호  이 켜집니다. 이어서, 물통 표시기호  가 켜집니다.
- 물통 칸의 커버(그림 A, 번호 7)를 열고 물통을 밖으로 꺼내 주세요.
  - 밀크 샤워 표시기호  이 켜집니다.
- 밀크 샤워용 로터리 스위치를 반시계 방향으로 돌려 밀크 샤워를 열어 주세요.

#### 경고!

고온 스팀에 의한 화상 위험  
이 과정 중 밀크 샤워기에서 나오는 뜨거운 스팀에 화상을 입지 않도록 조심해주세요.

- 물이 밀크 샤워를 통하여 응기로 흘러나오며, 이때 증기도 나옵니다. 밀크 샤워 표시기호  가 깜박거립니다.
- 스팀이 이상 더 나오지 않으면 밀크 샤워용 로터리 스위치를 반시계 방향으로 돌려 밀크 샤워를 닫아 주세요.
  - 제품 내 물기 배출이 완료되었습니다.





### 노트!

밀리타® 클라리스® 정수필터는 장기간 건조한 상태로 두면 안됩니다. 따라서 장기간 제품을 사용하지 않을 경우에는 물컵 속에 담긴 채 냉장고에 넣어 둘 것을 권장합니다.

### 운반

- 제품 내부 물기 빼주기 (71 쪽 참조)
- 드립 트레이와 커피 찌꺼기 수거통을 비우고 청소해 주세요.
- 물통과 원두통을 비워 주세요. 손이 닿지 않는 곳에 있는 원두는 필요한 경우 진공 청소기를 이용하여 주세요.
- 밀리타® 클라리스® 정수필터를 물통에서 꺼내 주세요.
- 제품을 운반할 때에는 손상을 방지하기 위해 가능하면 원포장재로 제품을 잘 포장해 주세요.

### 주의!

차가운 온도에서 제품을 운송하거나, 온도가 낮은 곳에 제품을 두지 마세요. 남아 있는 물이 얼거나 응축되어 제품에 손상을 초래할 수 있습니다.




### 폐기

- 거주하는 지역의 폐기물 처리 규정에 따라 폐기해 주세요.







### 13 문제해결

문제점	원인	해결 방법
커피가 방울 방울 씩 나온다.	분쇄입자가 너무 미세 하게 설정되어 있다.	분쇄 강도를 더 거친 쪽으로 설정한다. 추출장치를 청소 해 준다. 필요한 경우 석회질 제거 프로그램 혹은 청소 프 로그램을 실행해 준다
커피가 추출 되지 않는다.	물통에 물이 없거나, 바 르게 끼워지지 않았 다	물통을 채워 주고, 제자리에 바르게 넣어준다. 필요한 경 우 밀크 샤워를 열고 물이 흘 러 나오도록 하여 제품내의 공기를 빼준 다음 밀크 샤워 를 닫아 준다.
	커피 추출장치가 막혀 있다.	커피 추출장치를 청소해 준 다.
분쇄기로 원두가 분쇄되지 않는다	원두가 분쇄기로 내려 가지 않는다 (원두에 기 름기가 너무 많다)	원두통을 가볍게 쳐준다.
	분쇄기에 이물 질이 끼 여 있다	서비스 센터에 연락한다.
분쇄기에서 소음이 크게 난다.	분쇄기에 이물 질이 끼 여 있다	서비스 센터에 연락한다.
원두통이 가득 차 있는 데도 원두 표 시 기호가 깜박거 린다.	커피 추출장치 내에 분 쇄커피가 충분 하지 않 다.	한 잔 추출하기 버튼  을 눌러 주거나 혹은 두 잔 추 출하기 버튼  을 눌러준다.
밀크 샤워 표시기 호  가 수시로 깜박 거린다.	제품내 급수라인에 공기가 차있다.	밀크 샤워 기호가 꺼질 때까 지 밸브를 열었다 닫아준다. 스위치를 끄고 추출장치를 꺼내어 청소한 후 다시 끼우 고 스위치를 다시 켜준다.



문제점	원인	해결 방법
자동청소 혹은 석회질 제거 진행이 중지된다	전원이 꺼졌다. 예. 정전	제품은 자동적으로 행굼 프로그램을 실행한다. 그렇게 하기 위하여 제품 사용설명서에 따라 주세요.
청소 표시기호  와 대기모드 표시기호  가 점멸한다..	추출장치가 끼워지지 않았거나, 바르게 끼워지지 않았다.	추출장치를 잘 끼워 준다
	추출장치 내에 분쇄 커피가 과다하게 들어 있다	제품의 전원스위치를 껐다가 켜짐/꺼짐 스위치로 다시 켜준다. (필요한 경우 대기모드가 디스플레이 될 때 까지 반복한다
모든 버튼이 계속하여 깜박거린다	시스템 에러	제품의 전원스위치를 껐다가 켜짐/꺼짐 스위치로 다시 켜준다. 이것으로 해결되지 않으면 서비스 센터에 연락한다.

이상 설명한 문제해결 방법이 도움이 되지 않으면, 밀리타 서비스 센터로 연락해주세요.





Dear Customer,

Congratulations on buying your Melitta® CAFFEO® LATTEA®.

We would like to welcome you as a latte macchiato and coffee gourmet.

With your new Melitta® CAFFEO® LATTEA® quality product, you will experience plenty of special coffee moments. Enjoy your favourite coffee specialities and indulge yourself with all your senses.

In order that you and your guests can enjoy the Melitta® CAFFEO® LATTEA® for a long time to come, please read these operating instructions carefully and thoroughly and keep them stored in a safe place.

Should you require more information or if you have any questions on this coffee maker, please contact us\* directly or visit us on the Internet at [www.lattea.eu](http://www.lattea.eu).

We hope you enjoy your new fully automatic coffee maker.

Your Melitta® CAFFEO® team

\* +49 571/ 86 1900

ENGLISH

® Registered trademark of a company of the Melitta Group





## Table of contents

1	Information about these operating instructions .....	78
1.1	Symbols in the text of these operating instructions .....	78
1.2	Intended use .....	79
1.3	Non-intended use .....	79
2	General safety instructions .....	80
3	Appliance description.....	82
3.1	Legend for Fig. A .....	82
3.2	Display .....	83
4	Starting up.....	84
4.1	Setting up.....	84
4.2	Connecting.....	85
4.3	Filling the bean container.....	86
4.4	Rinsing out the milk canister .....	86
4.5	Filling the water tank.....	86
4.6	Switching on for the first time.....	87
4.7	Adjusting the dispensed quantity .....	88
4.8	Adjusting the coffee strength .....	88
5	Switching on and off.....	89
5.1	Switching on the appliance .....	89
5.2	Switching off the appliance .....	89
6	Inserting the Melitta® Claris® water filter .....	90
7	Preparing espresso or café crème.....	92
7.1	Preparing one cup of espresso or café crème.....	92
7.2	Preparing two cups of espresso or café crème .....	93
8	Preparing milk froth.....	94
9	Preparing hot water.....	95





10	Function settings.....	96
10.1	Water hardness .....	96
10.2	Energy-saving mode.....	98
10.3	Auto-OFF function .....	99
10.4	Brewing temperature .....	100
10.5	Resetting the appliance to the default settings .....	101
10.6	Grinding fineness.....	102
11	Care and maintenance.....	103
11.1	General cleaning.....	103
11.2	Cleaning the brewing unit .....	104
11.3	Integrated cleaning programme.....	105
11.4	Integrated descaling programme .....	109
12	Transport and disposal .....	112
12.1	Preparation for transport, protection against freezing and measures for longer periods of non-use .....	112
13	Troubleshooting .....	114



## 1 Information about these operating instructions

For a clearer overview, unfold the fold-out pages on the front and back of these operating instructions.

### 1.1 Symbols in the text of these operating instructions

The symbols in these operating instructions indicate specific hazards associated with operating your Melitta® CAFFEO® LATTEA®, or provide you with useful tips.

#### Warning!

Sections with this symbol contain information for your safety and indicate possible accident and injury hazards.

#### Caution!

Sections with this symbol contain information about incorrect operation that should be avoided and point to possible material damage hazards.

#### Note

Sections with this symbol contain valuable additional information for operating your Melitta® CAFFEO® LATTEA® appliance.







## 1.2 Intended use

The Melitta® CAFFEO® LATTEA® is exclusively designed for preparation of coffee and coffee specialities, for heating water as well as for preparing milk froth with the milk2shower milk powder outside of the appliance.

To use the appliance as intended means:

- that you carefully read, understand, and comply with the operating instructions.
- that you especially comply with the safety instructions.
- that you use the Melitta® CAFFEO® LATTEA® within the operating conditions specified in these operating instructions.

## 1.3 Non-intended use

Non-intended use is defined as using the Melitta® CAFFEO® LATTEA® in a manner that differs from the use described in these operating instructions.

### Warning!

Non-intended use can lead to injury or scalding with hot water or steam.

### Note

The manufacturer bears no liability for damage that is attributed to non-intended use.



## 2 General safety instructions


Please carefully read the following instructions all the way through. Failure to comply with the instructions can affect your own safety and the safety of the appliance.

### Warning!

- Keep the following objects out of the reach of children: packaging materials, small parts.
- All persons using the appliance must be familiar with its operation in advance, and they must be instructed in the possible hazards associated with the appliance.
- Never allow children to use the appliance or to play near the appliance unsupervised.
- The appliance can be used by children above 8 years of age and by people with limited physical, sensory or mental abilities or lacking experience and knowledge if they are supervised or were instructed on the safe use of the appliance and understand the resulting dangers. Children are not allowed to play with the appliance. Cleaning and maintenance by the user may not be performed by children and people with limited physical, sensory or mental abilities or lacking experience and knowledge if they are not supervised.
- Only use the appliance if it is in faultless condition.
- Never attempt to repair the appliance yourself. If repairs are necessary, contact the Melitta® Service Hotline only.
- Comply with the safety instructions on the next page.









 **Warning!**

- Do not make any alterations in or on the appliance, on its components or on the supplied accessories.
- Never immerse the appliance in water.
- Never touch the appliance with wet hands or feet.
- Never touch hot appliance surfaces.
- Never reach into the interior of the appliance when it is in operation.
- Never open the right cover during operation, unless you are expressly requested to do so in these operating instructions.
- This appliance is intended for home use and in similar settings, such as: Employee kitchens in stores, offices and other similar working environments; In agricultural facilities; By customers at hotels, motels and other housing facilities; At bed and breakfasts.
- During the guarantee period, have the damaged power cable replaced only by the manufacturer; only after the guarantee period have it replaced by qualified specialists.
- Comply also with the safety instructions in the other sections of these operating instructions.



## 3 Appliance description

### 3.1 Legend for Fig. A

Fig. number	Explanation
1	Drip tray with cup plate and coffee grounds container (internal) along with float (indicator for full drip tray)
2	Height-adjustable outlet
3	ON/OFF button 
4	Coffee quantity regulator
5	Button for one-cup dispensing 
6	Button for two-cup dispensing 
7	Water tank
8	Bean container
9	Button for coffee strength 
10	Display
11	Rotary switch for the milk shower
12	Milk shower
13	Milk canister
14	Right cover (removable, covering the grinding fineness adjustment element, brewing unit and identification label)





### 3.2 Display

Symbol	Meaning	Display	Explanation/prompt
	Standby	Flashing	Appliance is heating up or coffee dispensing process is running.
		Illuminated	The appliance is ready for operation.
	Melitta® Claris® water filter	Illuminated	Change the Melitta® Claris® water filter
		Flashing	Filter change in process
	Water tank	Illuminated	Fill the water tank
		Flashing	Insert the water tank
	Drip tray and coffee grounds container	Illuminated	Empty drip tray and coffee grounds container
		Flashing	Insert drip tray and coffee grounds container
	Coffee strength	Illuminated	1 bean: mild 2 beans: normal 3 beans: strong
		Flashing	Fill the bean container; flashing stops after dispensing the next coffee.
	Cleaning	Illuminated	Clean the appliance
		Flashing	Integrated cleaning programme is running
	Descaling	Illuminated	Descale the appliance
		Flashing	The integrated descaling programme is running
	Milk shower and hot water dispensing	Illuminated	Open the milk shower
		Flashing	Close the milk shower



### Note

If all of the symbols on the display are weakly illuminated, the appliance is in energy-saving mode.

## 4 Starting up

When starting the appliance for the first time, please carry out the following steps.

When you have completed these steps, the appliance is ready for operation. You can now prepare coffee.

We recommend pouring away the first two cups of coffee after the first start up.

### 4.1 Setting up

- Place the appliance on a stable, level, and dry surface. Make sure that there is a distance of 10 cm to the wall and other objects.
- The Melitta® CAFFEO® LATTEA® has two rollers on the back side of the appliance. It can thus be easily moved by slightly lifting it from the front.



### Caution!

- Never place the appliance on hot surfaces or in damp areas.
  - Do not transport or store the appliance in vehicles or rooms at low temperatures, as the remaining water could freeze or condense and thereby damage the appliance. Follow the instructions on page 112.
- 
- The coffee grounds container is located in the drip tray. Please make sure that the drip tray is pushed into the appliance all the way to the stop.



## Notes

- Keep the packaging material, including hard foam elements, in order to avoid damage during transport or in case of return shipments.
- It is normal to find traces of coffee and water in the machine before it is started up for the first time. This is because the appliance has already been tested for faultless function at the factory.

## 4.2 Connecting

- Plug the power cable into an appropriate power socket.



## Warning!

**Danger of fire and electric shock due to incorrect supply voltage, incorrect or damaged connections and power cord.**

- Make sure that the supply voltage corresponds to the supply voltage specified on the identification label of the appliance. The identification label is on the right side of the appliance behind the cover (Fig. B, no. 14).
- Make sure that the power socket meets the applicable standards for electrical safety. If in doubt, contact a qualified electrician.
- Never use damaged power cables (damaged insulation, bare wires).



### 4.3 Filling the bean container

- Remove the lid of the bean container and fill the container with fresh coffee beans.

#### Caution!

- Fill the bean container with coffee beans only.
- Never fill the bean container with ground, freeze-dried, or caramelised coffee beans.

- Place the lid on the container.

### 4.4 Rinsing out the milk canister

- Rinse out the milk canister with clean water before starting up the appliance for the first time.

### 4.5 Filling the water tank

- Open up the flap of the water tank (Fig. A, no. 7) and pull the water tank up and out of the appliance.
- Fill the water tank to the max. mark with fresh tap water and reinsert it.

#### Note


If the water tank runs empty during operation (e.g. during the coffee dispensing process), the symbol for the water tank will be illuminated. The current operation will be stopped and the water tank must be filled before starting a new operation.












## 4.6 Switching on for the first time

All of the tubes have been drained and aired out at the factory. For this reason, the first time the appliance is switched on, the symbol for the milk shower  will be illuminated after the heat-up phase and the appliance must be vented via the milk shower.

### Caution!

The appliance may only be vented **without** the Melitta® Claris® water filter and with a full water tank.

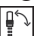- Insert the Melitta® Claris® water filter into the water tank only after venting.
  - Fill the water tank with fresh tap water to the max. mark **before** venting.
- 
- Press the ON/OFF button  to switch the appliance on.
    - The standby symbol  is flashing. The appliance heats up. After heating up, the symbol for the milk shower  will be illuminated.
  - Remove the milk canister and place a larger vessel under the milk shower.
  - Turn the rotary switch for the milk shower (Fig. A, no. 11) clockwise to open the milk shower.
    - The symbol for the milk shower  is flashing. Water runs into the vessel under the milk shower.
  - When water is no longer running out of the outlet and the symbol for the milk shower  is illuminated, turn the rotary switch for the milk shower anti-clockwise to close the milk shower.
    - The appliance is ready for operation.






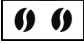

#### 4.7 Adjusting the dispensed quantity

- Turn the coffee quantity regulator (Fig. A, no. 4) to variably adjust the dispensed quantity (regulator to the left: less coffee, regulator to the right: more coffee).

Dispensed quantity	Regulator far left	Regulator in the middle	Regulator far right
For single-cup dispensing	30 ml	125 ml	220 ml
For two-cup dispensing	2x30 ml	2x125 ml	2x220 ml

#### 4.8 Adjusting the coffee strength

- Press the button for coffee strength  several times to select among three possible coffee strengths.  
→ Your selection will then be shown with the bean symbols  on the display.

Display	Coffee strength
	Mild
	Normal (factory setting)
	Strong

- You can also adjust the coffee flavour by changing the grinding fineness setting. You can find more information on page 102.








## 5 Switching on and off



### 5.1 Switching on the appliance

#### Note

The appliance performs an automatic rinse every time it is switched on.


- Place a vessel below the outlet.
- Press the ON/OFF button  to switch the appliance on.
  - The standby symbol  is flashing. The appliance heats up. The appliance performs an automatic rinse and hot water flows out of the outlet. The standby symbol  will then be illuminated. The appliance is ready for operation.

### 5.2 Switching off the appliance







- Place a vessel below the outlet.
- Press the ON/OFF button  to switch off the appliance.
  - The appliance automatically rinses out the coffee channels once coffee has been dispensed. The brewing chamber goes into the resting position. The standby symbol  is not illuminated.



## 6 Inserting the Melitta® Claris® water filter





A Melitta® Claris® water filter is supplied with the appliance for filtering out limescale and other contaminants. Please only insert it **after starting up the appliance for the first time**. If you use the filter, you will have to descale the appliance less frequently and the water hardness will automatically be set to hardness level 1 (see page 96). The service life of your appliance will be extended thanks to this reliable protection from limescale. The water filter should be changed regularly (every 2 months); at the latest, however, it must be changed when the symbol for the water filter  is shown on the display.

**Prerequisite:** The appliance must be switched off (see 89 „Switching on and off“ ).

- Simultaneously press the button for coffee strength  and the ON/OFF button  for more than 2 seconds.
  - The symbol for the water filter  flashes during the entire change procedure. The symbol for the drip tray  is illuminated.
- Empty the drip tray and then reinsert it.
  - The symbol for the water tank  illuminates.
- Put the water filter in a glass with fresh tap water for several minutes before you insert it.
- Open up the flap of the water tank (Fig. A, no. 7) and pull the water tank up and out of the appliance.
- Empty the water tank.
- Screw the Melitta® Claris® water filter carefully into the thread on the bottom of the water tank.
- Fill the water tank to the max. mark with fresh tap water and reinsert it.
  - The symbol for the milk shower  will be illuminated.





- Take off the milk canister and place a vessel under the milk shower.
- Turn the rotary switch for the milk shower (Fig. A, no. 11) clockwise to open the milk shower.
  - The symbol for the milk shower  is flashing. Water runs into the vessel under the milk shower.
- When water is no longer flowing out of the outlet and the symbol for the milk shower  is illuminated, turn the rotary switch for the milk shower anti-clockwise to close the milk shower.
  - Subsequently, the standby symbol  and bean symbols  will be illuminated. The appliance is ready for operation and water hardness is automatically set to hardness level 1.



#### Notes





- The Melitta® Claris® water filter should not remain dry over an extended period of time. We therefore recommend storing the Melitta® Claris® water filter in the refrigerator in a glass of water when the appliance will not be in use for extended periods.
- After inserting the Melitta® Claris® water filter, excess active charcoal will be washed out of the filter the first time the appliance is rinsed out. This can cause the rinse water to appear slightly grey in colour. The water will clear again subsequently.



## 7 Preparing espresso or café crème

### 7.1 Preparing one cup of espresso or café crème

Prerequisite: The appliance must be ready for operation (see 89 „Switching on and off“ ).

- Place a suitable vessel under the outlet.
- Press the button for coffee strength  to adjust the coffee strength.
- Turn the coffee quantity regulator (Fig. A, no. 4) to adjust the dispensed quantity.
- Press the button for one-cup dispensing .
  - The grinding process and coffee dispensing now start. The standby symbol  is flashing. Dispensing ends automatically when the set dispensed quantity is reached.
- To interrupt coffee dispensing, press the button for one-cup dispensing .



#### Notes

- When the appliance is started up for the first time, the grinder will grind longer than usual.
- You can also adjust the dispensed quantity during the dispensing process. To dispense less coffee, turn the coffee quantity regulator to the left to the desired quantity, or turn it until the appliance stops dispensing. To dispense more coffee, turn the regulator to the right.









## 7.2 Preparing two cups of espresso or café crème

Prerequisite: The appliance must be ready for operation (see 89 „Switching on and off“ ).

Place two suitable vessels beside each other under the outlet.

- Press the button for coffee strength  to adjust the coffee strength.
- Turn the coffee quantity regulator (Fig. A, no. 4) to adjust the dispensed quantity.
- Press the button for two-cup dispensing .
  - The double grinding process and dispensing of coffee now start. The standby symbol  is flashing. Dispensing ends automatically when the set dispensed quantity is reached.
- To interrupt coffee dispensing, press the button for two-cup dispensing .



### Notes

- When the appliance is started up for the first time, the grinder will grind longer than usual.
- You can also adjust the dispensed quantity during the dispensing process. To dispense less coffee, turn the coffee quantity regulator to the left to the desired quantity, or turn it until the appliance stops dispensing. To dispense more coffee, turn the regulator to the right.






## 8 Preparing milk froth

Prerequisite: The appliance must be ready for operation (see 89 „Switching on and off“ ).

Place a vessel (e.g. a latte macchiato glass) under the milk canister.

- Remove the milk canister and fill it with the milk2shower milk powder.
- Place the milk canister on the magnetic holding point under the milk shower (Fig. A, no. 13).
- Turn the rotary switch for the milk shower (Fig. A, no. 11) clockwise to open the milk shower.
  - The symbol for the milk shower  is flashing. Approximately 90 ml of hot water flows into the milk canister and generates the milk froth. The milk froth runs out of the milk canister into the vessel below the canister. The flow of water stops automatically after about 90 ml.
- Turn the rotary switch for the milk shower anti-clockwise to close the milk shower (this can also be done prematurely if you desire less milk froth).
- Now start the coffee dispensing process, e.g. to prepare a latte macchiato.








## 9 Preparing hot water

Prerequisite: The appliance must be ready for operation (see 89 „Switching on and off“ ).

Take off the milk canister and place a tall vessel under the milk shower.

- Turn the rotary switch for the milk shower (Fig. A, no. 11) clockwise to open the milk shower.
  - The symbol for the milk shower  is flashing. Approximately 90 ml of hot water flows out of the milk shower and into the vessel. You can conclude this process at anytime by closing the milk shower.
- Turn the rotary switch for the milk shower anti-clockwise to close the milk shower.
- Repeat the process if the desired quantity of hot water has not been reached.










## 10 Function settings

### 10.1 Water hardness





Use the test strip provided to determine the water hardness in your area. Please comply with the instructions on the test strip packaging. Water hardness is set at 4 in the factory. If you have inserted the Melitta® Claris® water filter, water hardness 1 is set automatically (see page 90).



Prerequisite: The appliance must be ready for operation (see 89 „Switching on and off“).

To maintain appliance quality, please adjust the water hardness as follows:

- Simultaneously press the button for one-cup dispensing  and the button for two-cup dispensing  for more than 2 seconds.  
→ The standby symbol  is flashing rapidly.
- Press the button for one-cup dispensing  once to call up the menu for adjusting the water hardness.  
→ The symbol for the water filter  is illuminated.
- Press the button for coffee strength  several times to select among the four possible degrees of water hardness.  
→ Your water hardness selection according to the table is shown with the bean symbols  on the display.



Water hardness range	Properties	°d	°e	°f
1: 	soft	0-10	0-13	0-18
2: 	medium	10-15	13-19	18-27
3: 	hard	15-20	19-25	27-36
4:  flashing	very hard (factory setting)	>20	>25	>36

- Press the ON/OFF button  to confirm the selected water hardness.
  - All symbols on the display flash briefly as confirmation. The appliance is ready for operation, the standby symbol  is illuminated.




#### Note

During the adjusting process, if you do not press a button within 60 seconds the appliance automatically reverts to standby mode.












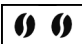


## 10.2 Energy-saving mode



After the last action, the appliance automatically (depending on the settings) switches to energy-saving mode (the appliance thus consumes much less energy than in standby mode). You can set different times for the energy-saving mode. The appliance is factory-set at 5 minutes .

**Prerequisite:** The appliance must be ready for operation (see 89 „Switching on and off“ ).

Please adjust the timer as follows:

- Simultaneously press the button for one-cup dispensing  and the button for two-cup dispensing  for more than 2 seconds.  
→ The standby symbol  is flashing rapidly.
- Press button for one-cup dispensing  twice to call up the menu for the energy-saving mode.  
→ The symbol for the water tank  illuminates.
- Press the brewing coffee button several times  to select from four possible times for the timer.


Display	Time
	5 minutes (factory setting)
	15 minutes
	30 minutes
 flashing	off

- Press the ON/OFF button  to confirm the selected time.  
→ All symbols in the display flash briefly for confirmation. The appliance is ready for operation, the standby symbol  is illuminated.






### Note







You can wake up the appliance from the energy-saving mode by pressing on the button for coffee strength . You can then immediately dispense coffee.





## 10.3 Auto-OFF function

The device switches off automatically after the last action (depending on the setting). You can set different times for the auto-OFF function. The appliance is factory-set at 30 minutes .

**Prerequisite:** The appliance must be ready for operation (see 89 „Switching on and off“ ).



Please adjust the timer as follows:

- Simultaneously press the button for one-cup dispensing  and the button for two-cup dispensing  for more than 2 seconds.  
→ The standby symbol  is flashing.
- Press the button for one-cup dispensing  three times to call up the menu for the Auto-OFF function.  
→ The symbol for the drip tray  is illuminated.  
→ Press the coffee strength button several times  to select from four possible times for the timer.

Display	Time
	30 minutes (factory setting)
	2 hours
	4 hours
 flashing	8 hours











- Press the ON/OFF button  to confirm the selected time.
  - All symbols in the display flash briefly as confirmation. The appliance is ready for operation, the standby symbol  is illuminated.


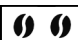

#### 10.4 Brewing temperature

The brewing temperature is factory-set at level 2 (medium ).

Prerequisite: The appliance must be ready for operation (see 89 „Switching on and off“ ).

Adjust the brewing temperature as follows to meet your requirements:


- Simultaneously press the button for one-cup dispensing  and the button for two-cup dispensing  for more than 2 seconds.
  - The standby symbol  is flashing.
- Press the button for one-cup dispensing  four times to call the menu for brewing temperature.
  - The symbol for cleaning  flashes.
- Press the button for coffee strength  to select between the three possible brewing temperatures.

Display	Brewing temperature
	low
	medium (factory setting)
	high

- Press the ON/OFF button  to confirm the selected brewing temperature.










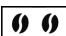
→ All symbols in the display flash briefly as confirmation. The appliance is ready for operation, the standby symbol  is illuminated.

## 10.5 Resetting the appliance to the default settings

Prerequisite: The appliance must be ready for operation (see 89 „Switching on and off“ ).

- Simultaneously press the button for coffee strength  and the ON/OFF button  for more than 2 seconds.
  - All settings are now reset to the factory settings. The standby symbol  will flash briefly as confirmation.

Overview of factory settings:

Function settings	Factory settings
Water hardness	Water hardness 4
Energy-saving mode	5 minutes 
Auto-OFF function	30 minutes 
Brewing temperature	Medium 



## 10.6 Grinding fineness

The grinding fineness level was optimally adjusted prior to delivery. Consequently, we recommend that you only readjust grinding fineness after dispensing approximately 1,000 coffees (about 1 year).

You can only set the grinding fineness **while** the mill is running. Thus, adjust grinding fineness directly after coffee dispensing starts.

If the coffee flavour is not sufficiently intense, then we recommend that you set a finer grinding level.

- Reach into the recess on the right side of the appliance (Fig. A, no. 14) and pull off the cover to the right.
- Start a normal coffee dispensing process.
- **While the grinder is running:** Place the lever in one of the three positions (Fig. E).
- Insert the four catches of the cover into the back of the appliance and swing the cover to the left until it locks into place.

Lever position	Grinding fineness
Left	Fine
Centre	Medium
Right	Coarse (factory setting)







## 11 Care and maintenance

### 11.1 General cleaning

- Clean the outside of the appliance with a soft, damp cloth and ordinary dishwashing liquid.
- Empty and clean the drip tray (Fig. A, no. 1) regularly; at the latest, however, when the float projects out of the cup plate.
- Clean the coffee grounds container regularly.
- Cleaning the milk shower: Turn the milk shower off in the direction indicated by the arrow (Fig. F) and rinse it thoroughly under running water.

#### Caution!

- To avoid damage to the appliance surface, do not use scouring cloths, sponges or cleaning products.
- Do not clean the drip tray in the dishwasher; this could cause deformation.

#### Note

The coffee grounds container (Fig. A, no. 1) is dishwasher-safe and can be washed in the dishwasher. Frequent washing in the dishwasher can cause slight discolorations on the coffee grounds container.



## 11.2 Cleaning the brewing unit

Prerequisite: The appliance must be switched off (see 89 „Switching on and off“ ).



### Note

For optimal protection of your appliance, we recommend that you clean the brewing unit under running tap water once a week.

- Reach into the recess on the right side of the appliance (Fig. A, no. 14) and pull off the cover to the right.
- Press and hold the red button on the handle of the brewing unit (Fig. B, no. 1) and turn the handle clockwise to the stop (approximately 75°).
- Use the handle to pull the brewing unit out of the appliance.
- Leave the brewing unit as it is (do not move or twist the components of the brewing unit).
- Thoroughly rinse off the entire brewing unit from all sides under running water. Make sure particularly that the surface shown in Fig. D is free of coffee residues.



### Caution!


Never clean the brewing unit in the dishwasher.

- Let the brewing unit drip dry.
- If necessary, remove coffee residues from the surfaces in the interior of the appliance where the brewing unit is inserted.
- Reinsert the brewing unit into the appliance and turn the handle of the brewing unit anti-clockwise to the stop to lock.
- Insert the four catches of the cover into the back of the appliance and swing the cover to the left until it locks into place.






### 11.3 Integrated cleaning programme





The integrated cleaning programme removes residues, including coffee oil residues, that cannot be eliminated by hand. It takes a total of approximately 15 minutes. The cleaning symbol  flashes during the entire process.

Prerequisite: The appliance must be switched off (see 89 „Switching on and off“ ).

#### Caution!

- Run the integrated cleaning programme every 2 months or after approximately 200 brewed cups of coffee; at the latest, however, run the programme when the symbol for cleaning  lights up on the display.
- Only use Melitta® cleaning tabs for fully automatic coffee makers. These cleaning tabs are specifically designed for the Melitta® CAFFEO® LATTEA®. The use of other cleaning agents can damage the appliance.


Run the integrated cleaning programme as follows:


- 1 Open up the flap of the water tank (Fig. A, no. 7) and pull the water tank up and out of the appliance. Fill the water tank to the max. mark with fresh tap water and reinsert it.
- 2 Simultaneously press both the button for one-cup dispensing  and the ON/OFF button  for about 3 seconds.
  - The symbol for cleaning  flashes.  
The drip tray symbol  illuminates.
- 3 Empty the drip tray and coffee grounds container.
- 4 Reinsert the drip tray without the coffee grounds container and place the coffee grounds container under the outlet.







## Phase 1

During Phase 1, one bean symbol  is shown on the display.

→ First, two automatic rinsing processes are carried out. Afterward, the standby symbol  illuminates.

- 5 Reach into the recess on the right side of the appliance (Fig. A, no. 14) and pull off the cover to the right.
- 6 Press and hold the red button on the handle of the brewing unit (Fig. B, no. 1) and turn the handle clockwise to the stop (approximately 75°).
- 7 Use the handle to pull the brewing unit out of the appliance.
  - The standby symbol  and the symbol for cleaning  will flash alternately, as long as the brewing unit is out of the machine.

### Caution!

#### Danger of damaging the brewing unit

- During the cleaning programme, only remove the brewing unit when instructed to do so.




- 8 Leave the brewing unit as it is (do not move or twist the components of the brewing unit).
- 9 Thoroughly rinse off the entire brewing unit from all sides under running water.
- 10 Let the brewing unit drip dry.
- 11 Place a cleaning tab in the brewing unit (Fig. C).
- 12 Reinsert the brewing unit into the appliance and turn the handle of the brewing unit anti-clockwise to the stop to lock.
  - Phase 1 is completed.





## Phase 2


During Phase 2, two bean symbols  are shown on the display.


→ The symbol for cleaning  continues to flash; the standby symbol  goes out. The symbol for the water tank  illuminates.

13 Insert the four catches of the cover in the back of the appliance and swing the cover to the left until it engages.

14 Open up the flap of the water tank (Fig. A, no. 7) and pull the water tank up and out of the appliance. Fill the water tank to the max. mark with fresh tap water and reinsert it.


15 Push the outlet (Fig. A no. 2) all the way down.

16 Press the button for coffee strength  to continue with the integrated cleaning programme.

→ The integrated cleaning programme continues. This stage lasts approximately 5 minutes. Water flows out of the outlet as well as in the interior of the appliance into the drip tray. Subsequently, the symbol for the drip tray  illuminates.

→ Phase 2 is completed.

## Phase 3

During Phase 3, three bean symbols  are shown on the display.

17 Empty the drip tray and coffee grounds container.


18 Reinsert the drip tray without the coffee grounds container and place the coffee grounds container under the outlet.

→ Phase 3 is completed.




#### Phase 4

During Phase 4, three bean symbols  are shown on the display. The middle bean is flashing.

- The integrated cleaning programme continues. This stage lasts approximately 5 minutes. Water flows out of the outlet as well as in the interior of the appliance into the drip tray. Subsequently, the symbol for the drip tray  illuminates.


19 Empty the drip tray and the coffee grounds container and then reinsert them.

- The standby symbol  will be illuminated after a brief heat-up phase.  
The appliance is ready for operation.






## 11.4 Integrated descaling programme





The integrated descaling programme removes limescale in the interior of the appliance. It requires a total of approximately 25 minutes. The symbol for descaling  flashes during the entire process.

Prerequisite: The appliance must be switched off (see 89 „Switching on and off“ ).


### Caution!


- Carry out the integrated descaling programme every 3 months or when the descaling symbol  illuminates on the display.
- Only use Melitta® ANTI CALC Espresso Machines descaling agent. These descaling products are exactly designed for the Melitta® CAFFEO® LATTEA®.
- Never use vinegar or other descaling agents.

Run the integrated descaling programme as follows:

- 1 Before descaling, remove – if in use – the Melitta® Claris® water filter from the water tank.
- 2 Remove the milk canister.
- 3 Simultaneously press both the button for two-cup dispensing  and the ON/OFF button  for about 3 seconds.
  - The symbol for descaling  is flashing.
  - The symbol for the drip tray  is illuminated.

### Phase 1


During Phase 1, one bean symbol  is shown on the display.

- 4 Empty the drip tray and coffee grounds container.
- 5 Reinsert the drip tray without the coffee grounds container and place the coffee grounds container under the milk shower.
  - The symbol for the water tank  illuminates.







- 6 Open up the flap of the water tank (Fig. A, no. 7) and pull the water tank up and out of the appliance and then empty it completely.
- 7 Add the descaling agent (e.g. Melitta® ANTI CALC Espresso Machines liquid descaling agent) to the water tank according to the instructions on the packaging.

 **Warning!**

The descaling agent can cause skin irritations

Comply with the safety instructions and the dosing information specified on the descaling agent packaging.

- 8 Reinsert the water tank.
- 9 Press the button for coffee strength  to continue with the integrated descaling programme.

→ The integrated descaling programme is started. Water flows inside the appliance into the drip tray in multiple intervals. This stage lasts approximately 15 minutes. Subsequently, the symbol for the milk shower  illuminates.



→ Phase 1 is completed.

Phase 2

During Phase 2, two bean symbols  are shown on the display.

- 10 Make sure that the coffee grounds container is placed directly under the milk shower.

- 11 Turn the rotary switch for the milk shower (Fig. A, no. 11) clockwise to open the milk shower.





→ Water flows out of the milk shower into the coffee grounds container. The symbol for the milk shower  flashes during this process. Subsequently, the symbol for the drip tray  illuminates.

- 12 Leave the milk shower open.
- 13 Empty the drip tray and coffee grounds container.









- 14 Reinsert the drip tray without the coffee grounds container and place the coffee grounds container under the milk shower.
- The symbol for the water tank  illuminates.
- 15 Thoroughly rinse the water tank, fill it to the max. mark with fresh tap water.
- 16 Press the button for coffee strength  to continue with the integrated descaling programme.
- Water flows in multiple intervals out of the milk shower into the coffee grounds container. The symbol for the milk shower  flashes during this process. Subsequently, the symbol for the milk shower  illuminates.
- Phase 2 is completed.

### Phase 3

During Phase 3, three bean symbols  are shown on the display.

- 17 Turn the rotary switch for the milk shower anti-clockwise to close the milk shower.
- Water flows inside the appliance into the drip tray. Subsequently, the symbol for the drip tray  illuminates.
- 18 Empty the drip tray and then reinsert it.
- The standby symbol  is illuminated after a brief heat-up phase. The appliance is ready for operation.
- 19 Reinsert the Melitta® Claris® water filter into the water tank.





## 12 Transport and disposal







### 12.1 Preparation for transport, protection against freezing and measures for longer periods of non-use

#### Venting the appliance

We recommend that you vent the appliance if it will not be used for an extended period of time and before transport. This also protects the appliance against frost damage.

**Prerequisite:** The appliance must be ready for operation (see 89 „Switching on and off“ ).

Take the Melitta® Claris® water filter out of the water tank.

- Simultaneously press both the button for one-cup dispensing  and the ON/OFF button  for longer than 2 seconds.
  - The standby symbol  flashes during a brief heat-up phase. Subsequently, the symbol for the water tank  is illuminated.
- Open up the flap of the water tank (Fig. A, no. 7) and pull the water tank up and out of the appliance.
  - The symbol for the milk shower  is illuminated.
- Place a vessel under the milk shower.
- Turn the rotary switch for the milk shower (Fig. A, no. 11) clockwise to open the milk shower.
  - Water runs out of the milk shower and into the vessel; also steam escapes. The symbol for the milk shower  is flashing.

#### **Warning!**

Danger of scalding by hot steam

Make sure that you do not burn yourself on the hot steam escaping from the milk shower during the venting process.





- As soon as no more steam is emerging, turn the rotary switch for the milk shower anti-clockwise to close the milk shower.  
→ The appliance has been vented.



#### Note

The Melitta® Claris® water filter should not remain dry over an extended period of time. We therefore recommend storing the Melitta® Claris® water filter in the refrigerator in a glass of water when the appliance will not be in use for extended periods.

#### Transport

- Vent the appliance (see page 112).
- Empty and clean the drip tray and coffee grounds container.
- Empty the water tank and the bean container. If necessary, remove beans from the bottom with a vacuum cleaner.
- Take the Melitta® Claris® water filter out of the water tank.
- Clean the brewing unit (see page 104).
- Transport the appliance in the original packaging if possible, including the hard foam elements, to prevent transport damage.



#### Caution!




Do not transport or store the appliance in vehicles or rooms at low temperatures, as the remaining water could freeze or condense and thereby damage the appliance.

#### Disposal

- Please dispose of the appliance in an environmentally responsible manner by means of suitable collection systems.


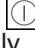

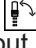


## 13 Troubleshooting




Problem	Cause	Solution
Coffee only drips through.	Grinding fineness is too fine.	Set the grinding fineness coarser. Clean the brewing unit. Run the integrated descaling programme, if necessary. Run the integrated cleaning programme, if necessary.
Coffee does not flow.	Water tank not filled or incorrectly inserted.	Fill the water tank and make sure it is inserted correctly. If necessary, open the milk shower until water flows out of the appliance and then close it again.
	Brewing unit is obstructed.	Clean the brewing unit
Grinder does not grind the coffee beans.	Beans do not drop into the grinder (beans are too oily).	Tap lightly on the bean container.
	Foreign objects in the grinder	Call the hotline.
Loud grinder noise	Foreign objects in the grinder	Call the hotline.
The bean symbols  flash even though the bean container is full.	Insufficient quantity of ground beans in the brewing chamber	Press the button for one-cup dispensing  or two-cup dispensing  .





Problem	Cause	Solution
The symbols for cleaning  and stand-by  flash alternately.	The brewing unit is missing or is not properly inserted.	Insert the brewing unit properly.
	The brewing chamber is overfilled.	Switch off the appliance and switch it on again via the ON/OFF button  (repeat if necessary) until standby mode is displayed
Symbol for the milk shower  is illuminated out of sequence.	There is air in the lines inside the appliance.	Open the valve until the symbol goes out and close the valve again. Switch off the appliance and remove the brewing unit, clean under running water, and then reinsert it. Switch the appliance back on again. Subsequently, dispense a larger amount of coffee.
The cleaning or descaling process was interrupted.	The power supply was interrupted, e.g. due to a power outage.	The appliance performs a rinsing program autonomously. To do so, follow the appliance instructions.



Problem	Cause	Solution
The brewing unit can no longer be reinserted after removal.	The brewing unit is not properly locked.	Check whether the handle for locking the brewing unit is correctly engaged.
	The actuator is not in the proper position.	Switch the appliance off and on again, and then press simultaneously the buttons for one- and two-cup dispensing   for longer than 2 seconds. The actuator moves into position. Then reinsert the brewing unit and make sure it is correctly locked into place.
Continuous flashing of all buttons	System error	Switch off the appliance and switch it on again via the ON/OFF button  ; if this does not solve the problem, send in the appliance to be serviced.

Please contact the Melitta® hotline, if the above mentioned solutions do not help to solve the problem: +49 571/ 86 1900.

